



**Important**

Before operating dishwasher, read "Important Safety Instructions" section in User Maintenance Instructions.

1. Push *POTS & PANS* or *NORMAL WASH* button, as desired.
2. Select *HEATED DRY* or *NATURAL DRY*.
3. Select *POTS & PANS* or *NORMAL WASH* cycle by turning knob to *START*.  
or  
Select *LIGHT WASH*, *RINSE & HOLD* or *DRY/PLATE WARMER* cycle by turning knob to appropriate setting.
4. Latch door.

Cycle	Sequence	Water Used	Cycle Time
		(Gallons)	(Minutes)
POTS & PANS Use for excessively soiled items.	Wash/Rinse, Rinse, Rinse, Wash, Rinse, Rinse, Rinse	10.3	96
NORMAL WASH Use for average soiled items.	Wash/Rinse, Rinse, Wash, Rinse, Rinse, Rinse	8.6	96
LIGHT WASH Use for lightly soiled items.	Wash/Rinse, Rinse, Wash, Rinse, Rinse	7.1	86
RINSE & HOLD Use to prevent food from drying on items.	Rinse, Rinse	3.1	12
DRY/PLATE WARMER Use for drying and warming			32
HEATED DRY Use for fast drying.			32
NATURAL DRY Use for no heat drying.			