


TOP VENTING PARTS

For Models: KEMC308HBL0, KEMC308HWH0, KEMC308HBT0
(Black) (White) (Biscuit)

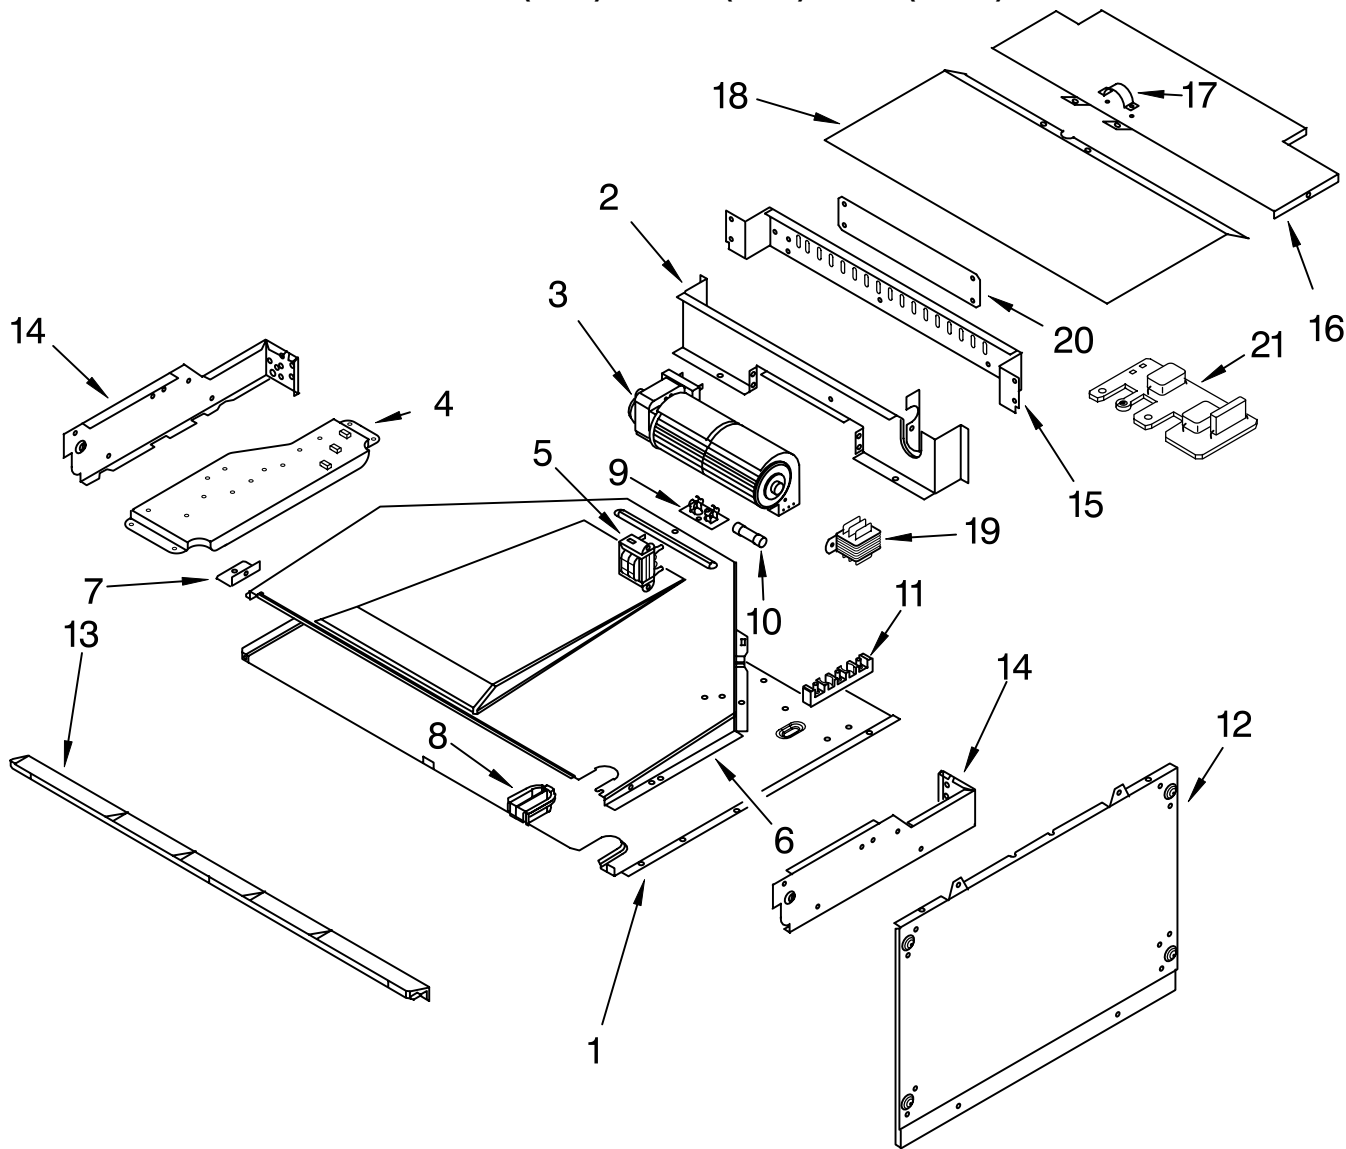

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4450378	Cover, Top
	4449809	Screw
2	4448935	Baffle, Blower
	4449154	Screw
	4449809	Screw
3	4450920	Blower
	4449809	Screw
4	4451789	Plate, Mounting
5	6610122	Transformer, (Lights)
	4449809	Screw

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

6	4451634	Exhaust Duct
7	4450027	Bracket, Duct
8	4449964	Grommet
	4449809	Screw
	112432	Nut
9	4454949	Holder, Fuse
	4449154	Screw
10	4454976	Fuse
11	4449868	Block, Terminal
	3400016	Screw
12	4452559	Side, Combo
	4449809	Screw
13	4450791	Vent, (Control Panel)
	4450038	Screw

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------


14		Side, Control Top
	4451597	Right
	4451598	Left
	4449809	Screw
15	4452244	Back, Control
	4449809	Screw
16	4450551	Cover, Top Rear
	4449809	Screw
17	4448664	Clamp
	4449809	Screw
18	4452367	Cover, Top Front
	4449809	Screw
19	4455038	Transformer, Control
20	4452247	Cover, Plate
	4449809	Screw
21	4451934	Suppressor

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: KEMC308HBL0, KEMC308HWH0, KEMC308HBT0
(Black) (White) (Biscuit)

30" BUILT-IN ELECTRIC
DOUBLE OVEN
THERMAL CONVECTION LOWER
MICROWAVE CONVECTION UPPER

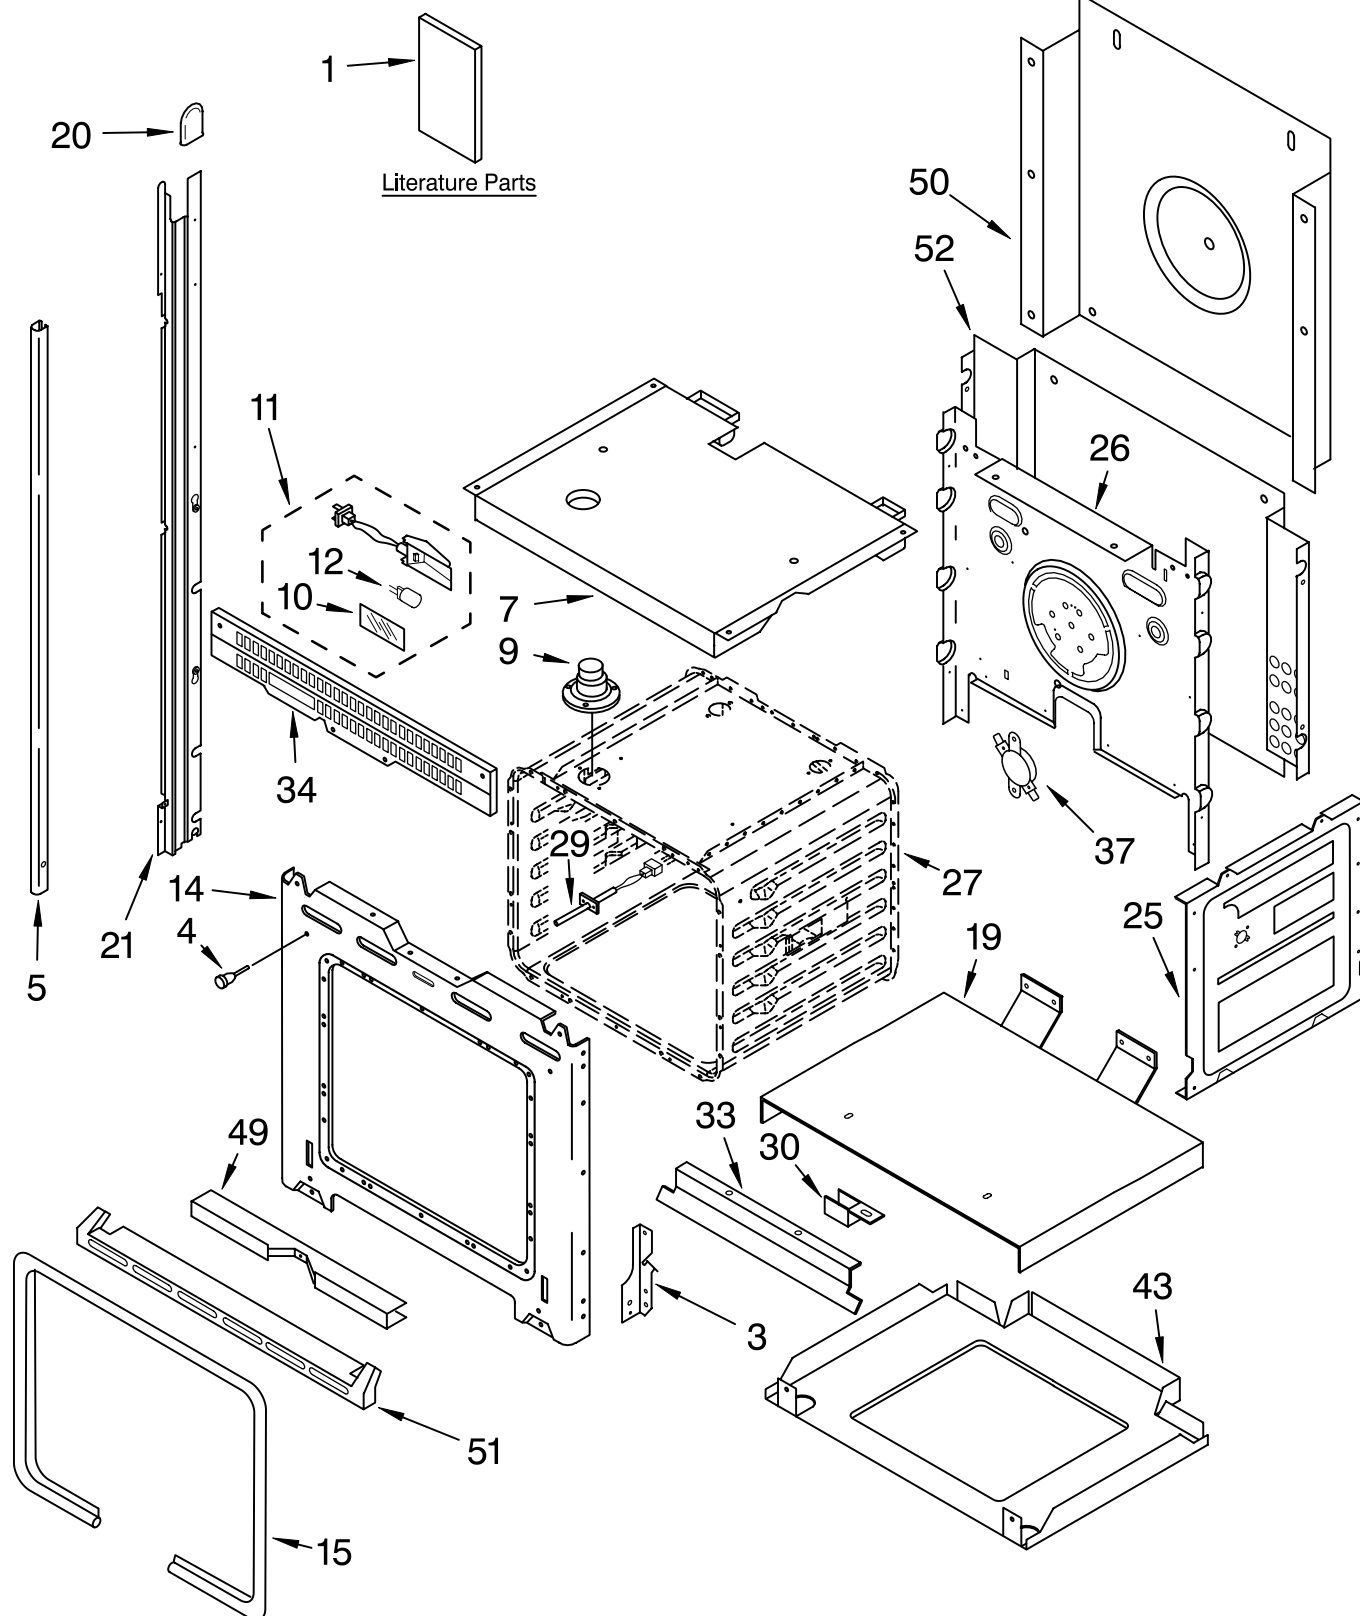

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS


For Models: KEMC308HBL0, KEMC308HWH0, KEMC308HBT0
(Black) (White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			7	4455286	Top Chassis	33	4452496	Deflector, Vent
				4449809	Screw	34	4451667	Vent, Center
1	LIT4450412	Literature Parts Installation Instructions	9	4452158	Tube, Vent		4450038	Screw
	LIT4452300	Use & Care Guide (Oven)	10	4452163	Lens, Light	37	4451442	Thermostat (TOD) (Temp.) SPST
	LIT4452614	Use & Care Guide (Microwave)	11	4448972	Oven Light Assy		4449809	Screw
	LIT4450786	Cooking Guide (Lable)	12	4452164	Bulb, Light	43	4451398	Base, Chassis
	LIT4449066	Cookbook (T/C Oven)	14	4451740	Frame, Front		4449809	Screw
	LIT4452295	Tech Sheet (Oven)		4449040	Screw	49	4448933	Retainer, Gasket
	LIT4449264	Easy Set Guide		4450118	Nut		4449154	Screw
	LIT3191638	Safer Cooking Tips	15	4455382	Gasket, Door	50	4451747	Cover, Back
	4451052	Easy Use Guide (Microwave)	19	4451478	Support, Insulation		4449809	Screw
3		Hinge Reciever	20	4451605	Cap, Spacer	51		Trim, Bottom
	4454664	Left Hand	21		Rail, Side		4455443	Black
	4454665	Right Hand		4450583	Right Side		4455445	White
4	4448520	Bumper, Door		4450584	Left Side		4455447	Biscuit
5		Trim, Side		4448444	Grommet		3400805	Screw
	4455430	RH Black		4449154	Screw		4452152	Bracket, Vent Mounting
	4455434	RH White	25	4454691	Side, Chassis (R.H. & L.H.)	52	4451756	Chassis, Back
	4455432	RH Biscuit		4449809	Screw	FOLLOWING PARTS NOT ILLUSTRATED		
	4455431	LH Black	26	4452234	Back, Chassis	INSULATION		
	4455435	LH White		4449809	Screw		4449316	Insulation, Wrap
	4455433	LH Biscuit	27		Liner, Oven (Not serviceable)		4450365	Insulation, Back
		Screw	29	4451665	Sensor		4452337	Insulation, Bottom Vent
	4449747	Black		4449154	Screw			
	4449041	White	30	4449845	Bracket, Support			
				4449809	Screw			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: KEMC308HBL0, KEMC308HWH0, KEMC308HBT0
(Black) (White) (Biscuit)

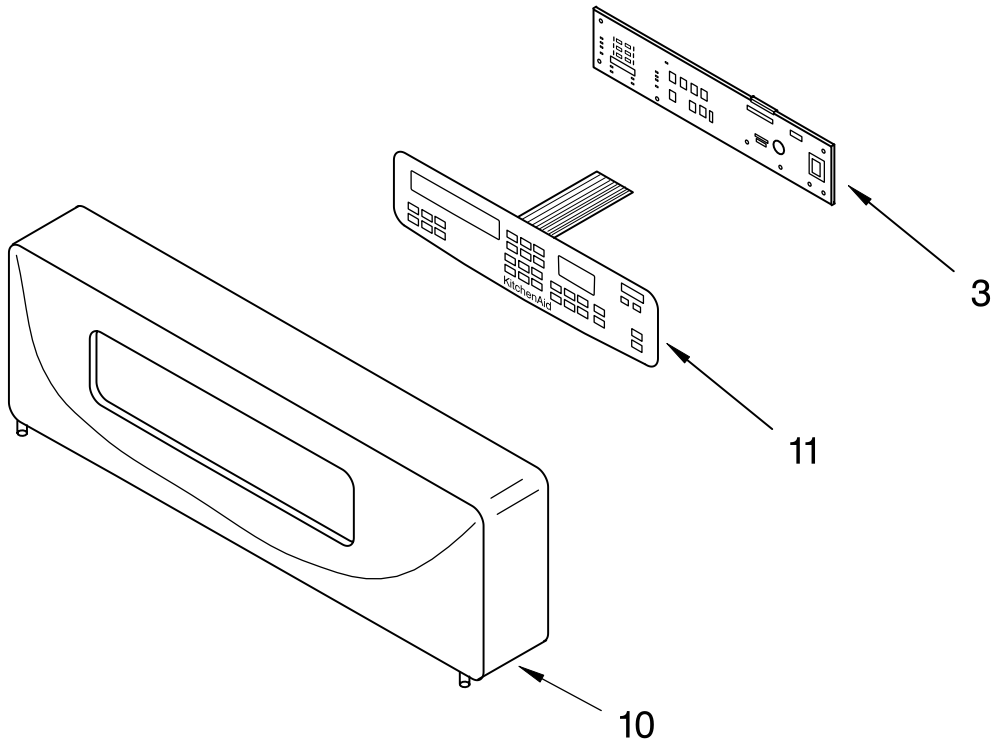

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

3	4453167	Microcomputer
	4449745	Screw
10		Control Panel Assy
	4452604	Black
	4452605	White
	4452974	Biscuit
11		Switch Membrane
	4455481	Black
	4455485	White
	4455483	Biscuit

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN DOOR PARTS

For Models: KEMC308HBL0, KEMC308HWH0, KEMC308HBT0
(Black) (White) (Biscuit)

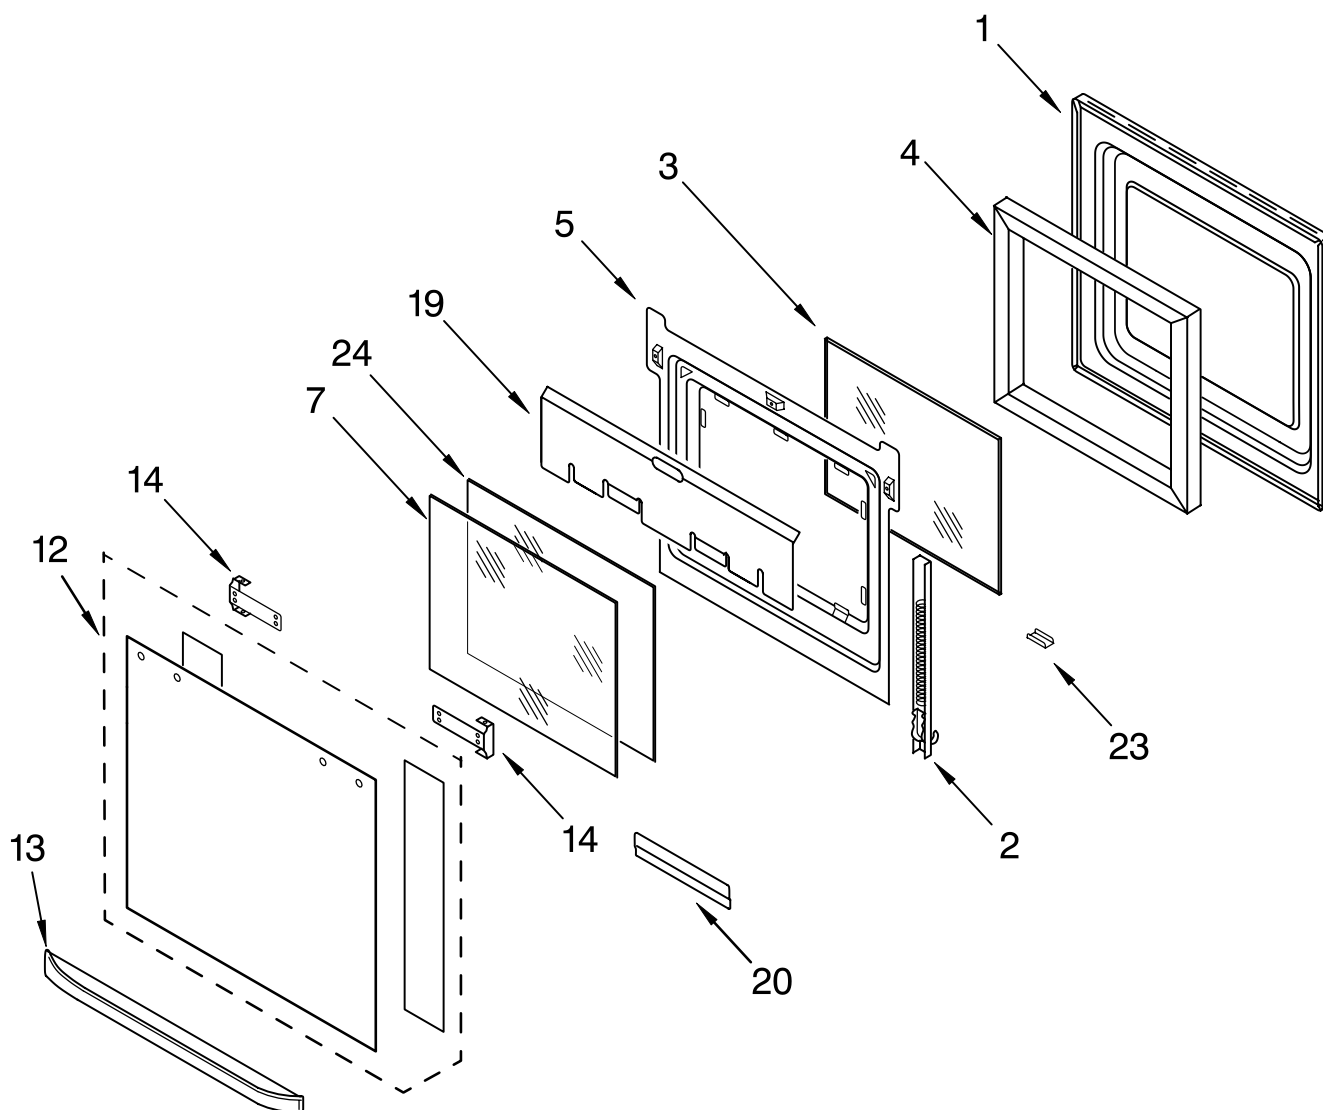

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4451719	Door Liner
2	4454947	Hinge, Door
	4449743	Screw
3	4449259	Glass, Inner
4	4451722	Insulation, Door
5	4451671	Retainer, Glass
	4449809	Screw

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

7	4449263	Glass, Inner
12		Door Glass, Assy
	4455391	Black
	4455390	White
	4455395	Biscuit
13		Door Handle
	4452502	Black
	4452503	White
	4452871	Biscuit
14		Bracket, Handle
	4452487	Right Hand
	4452488	Left Hand
	4451040	Screw


Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

19	4450362	Shield, Heat
	4449809	Screw
20	4451668	Retainer, Glass
	4449809	Screw
23		Retainer, Glass-Clip
	4450863	Black
	4450864	White
	4452119	Almond
24	4455257	Glass, Inner

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LATCH PARTS

For Models: KEMC308HBL0, KEMC308HWH0, KEMC308HBT0
(Black) (White) (Biscuit)

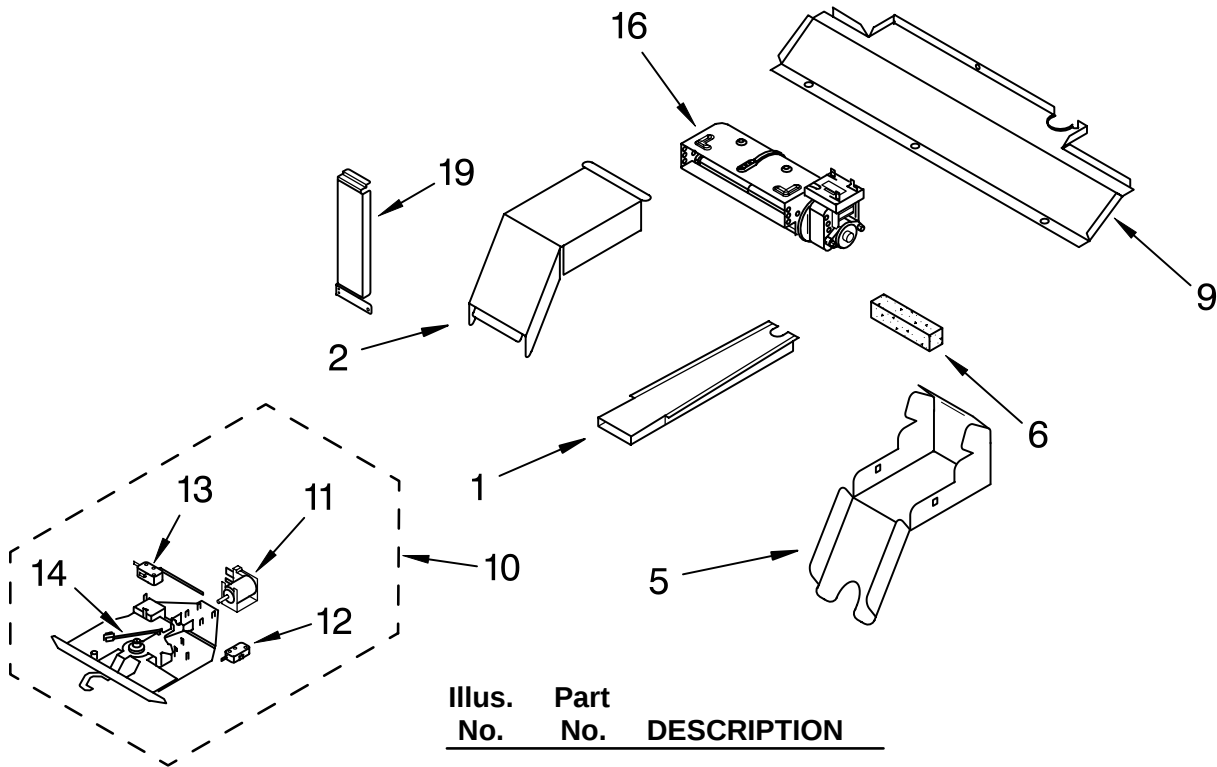

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4451759	Vent, Exhaust
2	4455178	Elbow, Vent-Top
5	4455177	Elbow, Vent-Bottom
6	4451758	Seal, Foam
9	4450408	Baffle, Rear
	4449154	Screw
10	4451424	Latch Assy.
11	4451663	Solenoid
12	4452312	Micro Switch N.C.
13	4451426	Micro Switch
14	4451537	Spring, Latch
	4449154	Screw
16	6610168	Blower
	4449809	Screw
19	4449906	EXT Filler
	4455191	Plate, Service

IMPORTANT PRODUCT SAFETY INFORMATION

ADVISE CONSUMERS OF AN ELECTROCUTION HAZARD WITH DO-IT-YOURSELF REPAIRS OF MICROWAVE OVENS.


The U.S. Consumer Product Safety Commission warns against do-it-yourself repairs of microwave ovens. Microwave ovens use high voltage which makes it particularly hazardous for consumers to remove the cover and touch electrical parts.

STRONGLY RECOMMEND THAT CONSUMERS HAVE PROFESSIONALS REPAIR MICROWAVE OVENS.

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models: KEMC308HBL0, KEMC308HWH0, KEMC308HBT0
(Black) (White) (Biscuit)

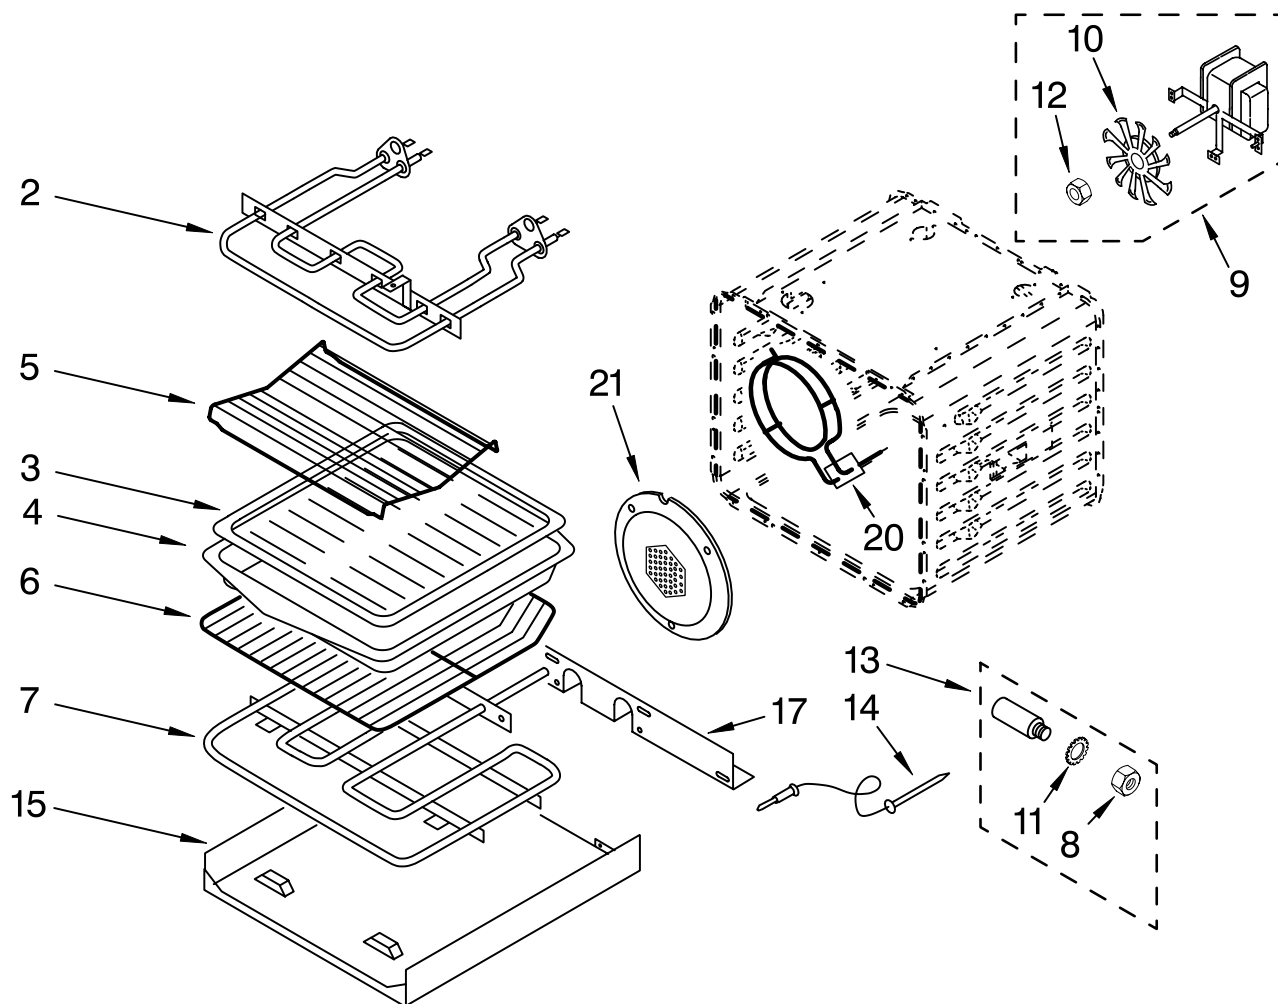


Illus. No.	Part No.	DESCRIPTION
2	4452156	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
5	3181534	Rack, Roasting
6	4448717	Rack, Oven
7	4452155	Element, Bake
8	4448881	Nut, Hex
9	4451583	Convection, Motor
	4449154	Screw
10	4452226	Blade, Fan
11	4448882	Washer, Lock
12	4452227	Nut
13	4451355	Jack, Meat Probe
14	4448948	Probe, Meat
15	4455037	Tray, Bake
17	4450039	Cover, Bake Tray
	4449809	Screw
20	4452157	Element, Convection
	4449154	Screw
21	4448418	Cover, Fan
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET AND STIRRER PARTS

For Models: KEMC308HBL0, KEMC308HWH0, KEMC308HBT0
(Black) (White) (Biscuit)

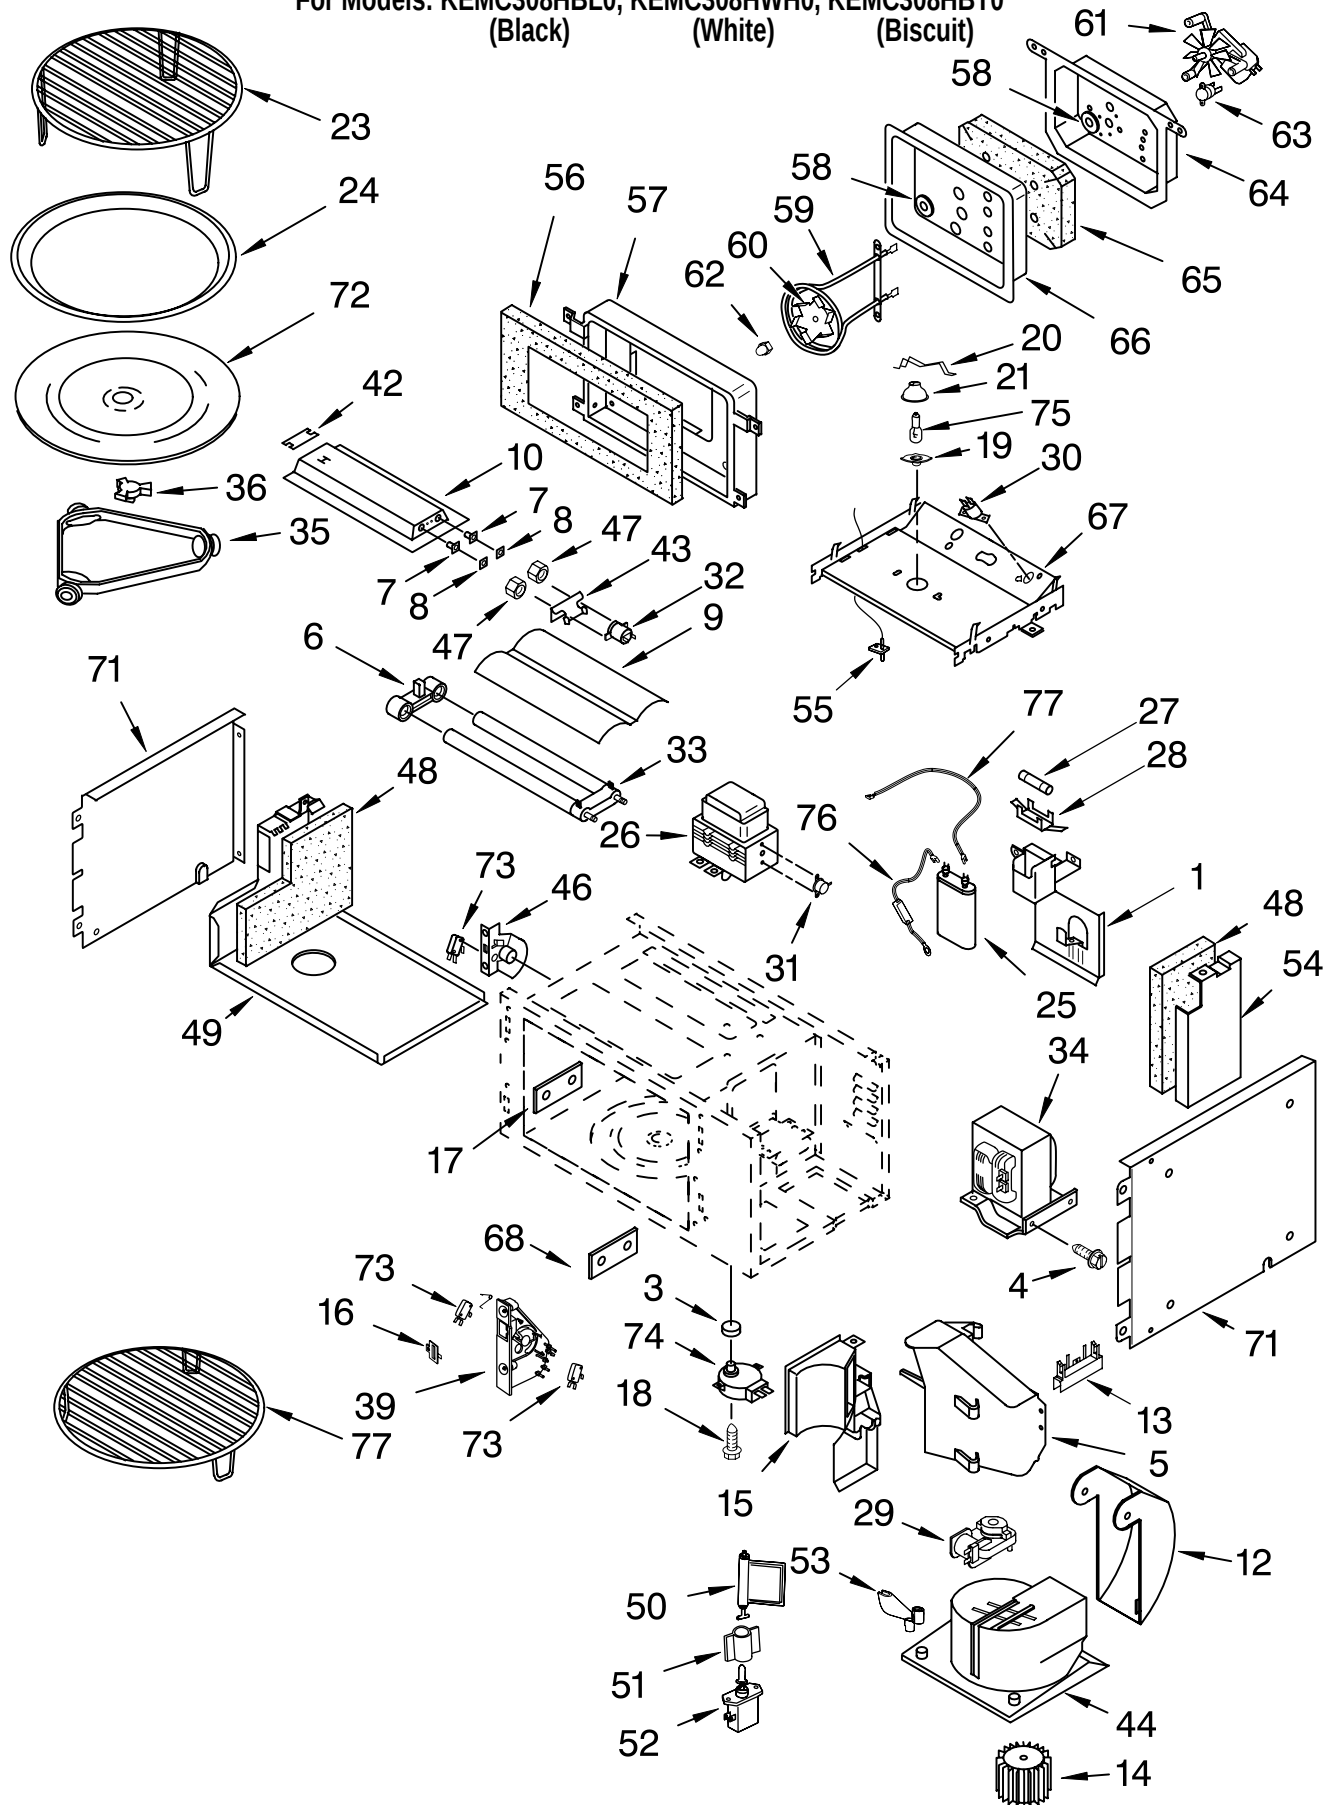

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET AND STIRRER PARTS


For Models: KEMC308HBL0, KEMC308HWH0, KEMC308HBT0
(Black) (White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	4375437	Bracket, Capacitor	30	4375279	Thermostat	55	4375422	Sensor, Temp.
3	4375252	Rubber Ring	31	4375423	Thermostat	56	4375420	Insulation
4	4375038	Screw	32	4375281	Thermostat	57	4375419	Duct, Heater
5	4375314	Air Duct, Magnetron	33	4375408	Q Tube Assembly	58	4375416	Washer
6	4375253	Support, Tube	34	4375438	Transformer	59	4375417	Element, Heater
7	4375421	Plug, Ceramic	35	4375406	Ring, Turntable	60	4375418	Fan
8	4375255	Bushing	36	4375407	Shaft, Turntable	61	4375429	Motor, Fan
9	4375256	Reflector	39		Bracket, Hinge	62		Left-Threaded Nut Serviced With Motor Item 61
10	4375257	Chamber, Reflector		4375412	Left			
12	4375450	Duct, Inlet		4375413	Right			
13	4375316	Insulation, Switch	42	4375331	Plate, Grill	63	4375430	Thermostat
14	4375322	Fan Wheel	43	4375332	Bracket	64	4375431	Shield, Heat
15	4375317	Duct, Air	44	4375441	Fan Cap	65	4375432	Insulation
16	4375415	Block, Slide	46		Switch Holder	66	4375433	Chamber, Heat
17	4375248	Cover Plate, Upper		4375412	Left		Cabinet	
18	4375251	Screw		4375413	Right	67	4375437	Isolation Plate
19	4375318	Lens, Lamp	47	4375258	Nut	68	4375338	Cover Plate
20	4375319	Spring	48		Insulation	71		Side Plate
21	4375320	Reflector		4375409	Left Side		4375341	Left
23	4375276	Rack		4375410	Right Side		4375342	Right
24	4393536	Crisp Plate	49	4375411	Plate, Side	72	4375405	Turntable
25	4375436	Capacitor			Bottom	73	4375346	Switch
26	4375424	Magnetron	50	4375425	Valve	74	4375278	Motor, Turntable
27	4375321	Fuse	51	4375428	Screw To Valve	75	4375348	Lamp
28	4375231	Block, Fuse	52	4375427	Thermoactuator	76	4375349	Rectifier
29	4375278	Motor, Blower	53	4375426	Air Bleed	77	4452220	Rack, Convection
			54	4375439	Shield, Heat Right			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MICROWAVE COMPARTMENT PARTS

For Models: KEMC308HBL0, KEMC308HWH0, KEMC308HBT0
(Black) (White) (Biscuit)

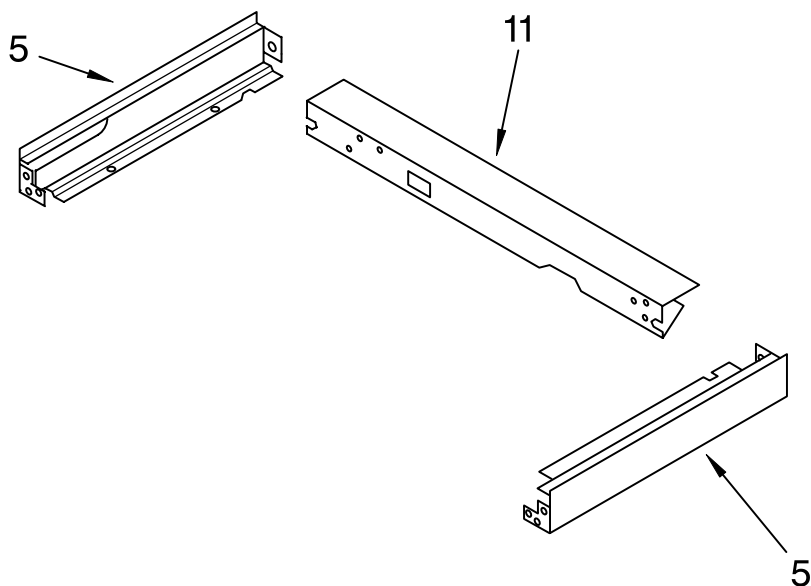


Illus. No.	Part No.	DESCRIPTION
5	4452551	Support Rails Right Side
	4452552	Left Side
	4449809	Screw
11	4452548	Rear Channel
	4449809	Screw
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MICROWAVE DOOR PARTS

For Models: KEMC308HBL0, KEMC308HWH0, KEMC308HBT0
(Black) (White) (Biscuit)

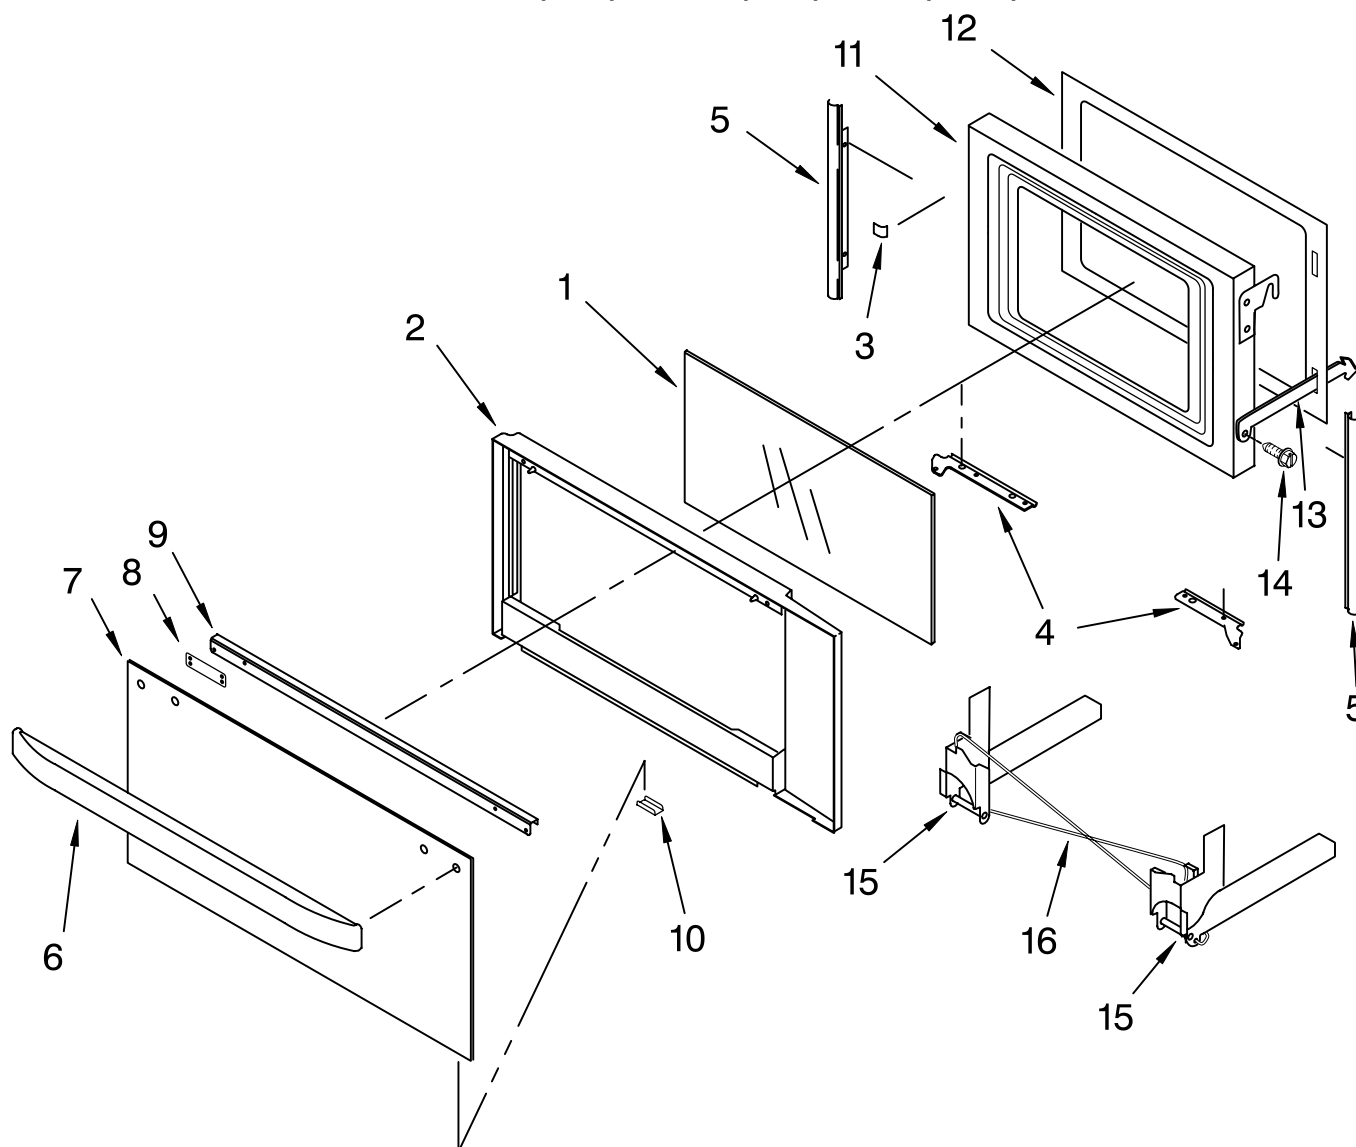

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4448937	Glass, Middle
2	4450946	Frame, Door
	4450038	Screw
3	4450265	Tape, Foam
4		Bracket, Mounting
	4449141	Right Side
	4449142	Left Side
	4449809	Screw

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

5		Filler, Side
	4449083	Right Side
	4449086	Left Side
	4449809	Screw
6		Handle, Door
	4452502	Black
	4452503	White
	4452871	Biscuit
7		Glass, Outer
	4452211	Black
	4452789	White
	4452995	Biscuit
8	4451055	Spacer

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

9	4452331	Bracket, Handle
	4451040	Screw
10		Retainer, Glass-Clip
	4450863	Black
	4450864	White
11	4375339	Door, Plate
12	4375414	Frame, Inner
13	4375330	Strap, Door
14	4375313	Screw
15		Hinge, Door
	4375323	Left
	4375324	Right
16	4451009	Spring, Torsion

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: KEMC308HBL0, KEMC308HWH0, KEMC308HBT0
(Black) (White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
<u>PAINT, TOUCH-UP (1/2oz.)</u>			<u>SPLICING WIRES--25FT.</u>			<u>FOLLOWING PARTS NOT ILLUSTRATED</u>		
	72017	White	<u>LENGTH</u>				4378944	Filler Kit (BL)
	261869	Cord Brown		242828	Wire (12 Ga. 150 c Black)		4378945	Filler Kit (WH)
	72032	Black		242820	Wire (14 Ga. 150 c Black)		4378946	Filler Kit (AL)
<u>PAINT, SPRAY</u>				242821	Wire (14 Ga. 150 c Blue)	<u>WIRING HARNESS PARTS</u>		
	350930	White		242822	Wire (14 Ga. 150 c Brown)		4452239	Harness, Latch
	261900	Citrine White		242830	Wire (14 Ga. 200 c Brown)		4452400	Lead, Ground
	830864	Black		242823	Wire (14 Ga. 150 c Green)		4449809	Screw
<u>ADHESIVE</u>				242824	Wire (14 Ga. 150 c Orange)		4454929	Harness, Main
	591014	Adhesive Loctite (1/3 oz.)		242829	Wire (12 Ga. 150 c Red)		4450831	Ground (M/W)
	482338	Sealer, Silastic (3 oz.)		242825	Wire (14 Ga. 150 c Red)		4450800	Screw, Ground
				242831	Wire (14 Ga. 200 c Red)		4449809	Screw
				242826	Wire (14 Ga. 150 c White)		4450950	Conduit, Combo
				242827	Wire (14 Ga. 150 c Yellow)		313438	Clip, Harness
				242832	Wire (14 Ga. 200 c Yellow)		4452222	Spacer, Harness
							4454835	Tie, Cable
						<u>Miscellaneous</u>		
							4448950	Screw, Install (4)
							814381	Hinge Pin Kit

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST