

PARTS LIST

for



30" ELECTRIC SET-IN SELF-CLEAN OVEN

**MODEL
RS660BXK-3**

▲B—Solid Black Glass Door




FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS



Whirlpool CORPORATION
Benton Harbor, Michigan.

OVEN PARTS

For Model: RS660BXK-3

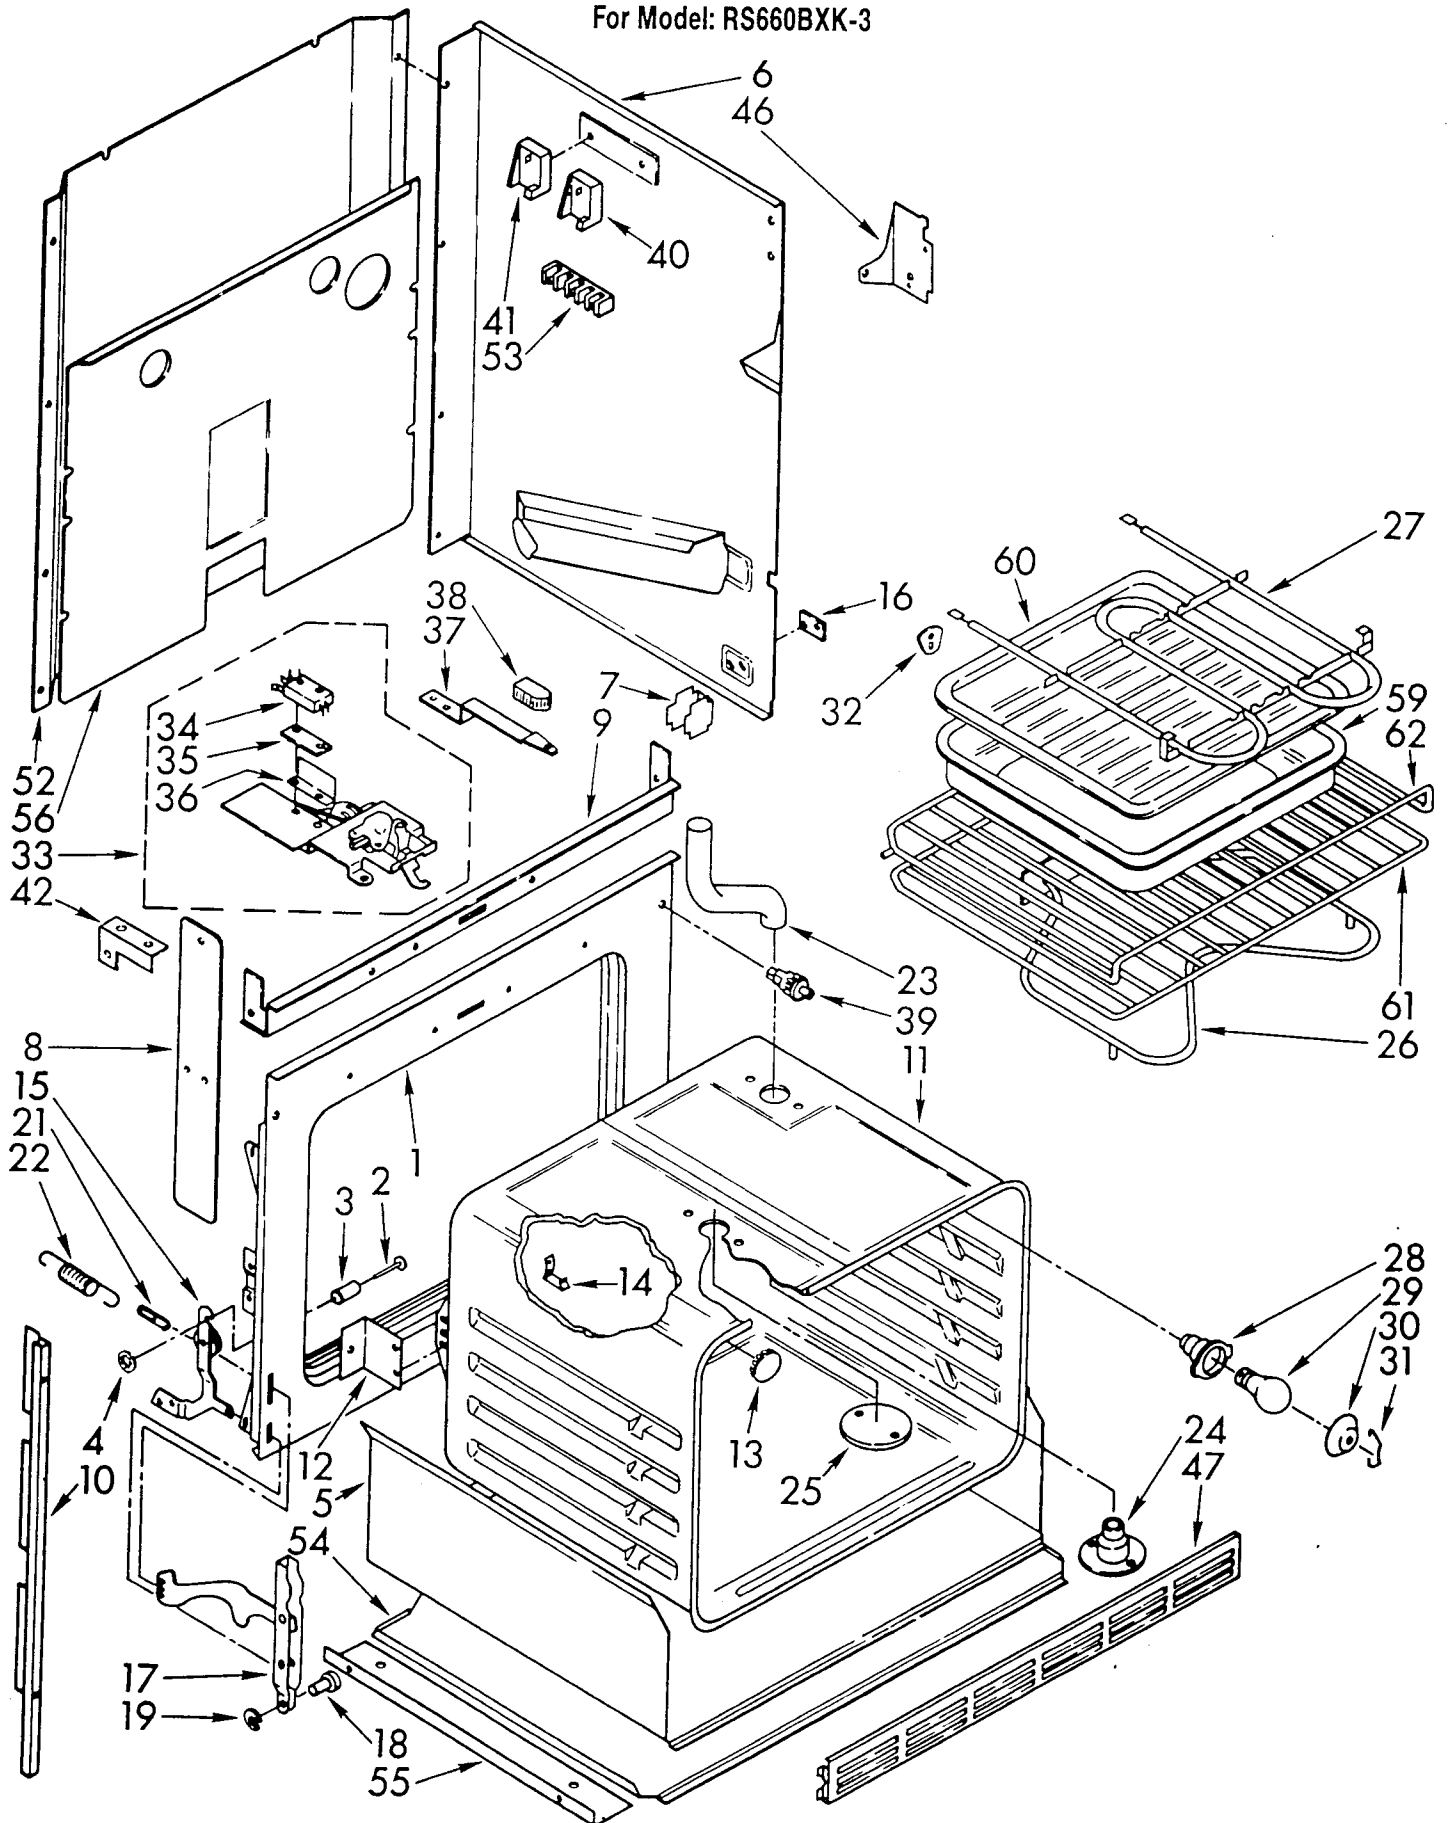

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


Note: The Screws And Nuts Required To Attach A Part Are Listed Immediately Following That Part.

1	328747	Front Frame
2	307985	Pin, Hinge Ear (2)
3	309111	Snubber, Door (2)
4	308306	Pushnut (2)
5	310770	Insulation Tray
6	311006	Side Wrapper R.H.
	311009	Side Wrapper L.H.
	313638	Screw, 8-18 x 1/2 (14)
7	311774	Support, Side Wrapper (4)
	313638	Screw, 8-18 x 1/2 (4)
8	311256	Insulation Baffle (2)
	308536	Screw, 6A x 1-1/4 (2)
9	310693	Baffle, Top Insulation
	313638	Screw, 8-18 x 1/2 (2)
10	310685	Side Trim L.H.
	310689	Side Trim R.H.
	313638	Screw, 8-18 x 1/2 (6)
11	328756	Oven (30" Pyro)
	311056	Screw (3)
12	310713	Bracket, Oven Mounting (2)
	246127	Screw, 10-32 x 5/8 (6)
13	257314	Plug Button
14	313382	Clip, Therm Bulb (2)
15	328801	Hinge Ear R.H.
	328802	Hinge Ear L.H.
16	310659	Plate (Side Panel) (2)
	308544	Screw, 10-24 x 1/2 (4)
17	329713	Channel Arm (2)
18	307986	Pin, Hinge (2)
19	307594	Ring, Retainer (2)
21	311897	Anchor, Spring (2)
22	308127	Spring, Oven Door (2)
23	310835	Tube, Vent Extension
24	310839	Smoke Eliminator
	343641	Screw, 10-16 x 1/2
	313638	Screw, 8-18 x 1/2 (2)
25	310662	Plate, Cover
	313638	Screw, 8-18 x 1/2 (2)
26	661170	Unit, Bake
		308180 (Alt.)
		313827 (Alt.)
	246127	Screw, 10-32 x 5/8 (2)
27	660579	Unit, Broil
		311714 (Alt.)
		311713 (Alt.) (Includes Illus. 32)
	246127	Screw, 10-32 x 5/8 (4)
28	660556	Socket, Oven Light
		307856 (Alt.)
		310208 (Alt.)
	308043	Screw, 10-12 x 7/8 (2)
29	311255	Bulb, Oven Light
30	308039	Cover, Oven Light
31	308038	Retainer, Oven Light
32	311982	Coverplate
33	328585	Latch Assembly

	313638	Screw, 8-18 x 1/2 (2)
	311056	Screw (2)
34	308185	Safety Switch
	98106	Screw (2)
35	309245	Insulator, Switch
36	313035	Terminal, Shield
	309258	Screw, 6 x 3/8 (2)
37	310825	Latch Handle
	308422	Screw, 10-24 x 1/2 (2)
38	311253	Knob, Latch Handle
	246135	Screw, 8 x 5/16
39	310345	Switch, Door
40	314209	Switch, Percentage Broil
	314215	Screw, No. 6
41	314211	Switch, Percentage Bake
	314215	Screw, No. 6
42	312320	Shield, Insulation
	313638	Screw, 8-18 x 1/2
46		Cover Side
	310714	L.H.
	310715	R.H.
	313638	Screw, 8-18 x 1/2 (6)
47	310668	Bottom Grill
	309029	Screw, 8-15 x 1/2 (3)
52	310459	Back Panel
	313638	Screw, 8-18 x 1/2 (6)
53	258076	Terminal Block
	112432	Nut (3)
	308043	Screw, 10-12 x 7/8 (2)
54	310458	Cover, Bottom & Top (2)
55	311592	Angle, Support (2)
	313638	Screw, 8-18 x 1/2 (4)
56	311012	Cover, Rear
	313638	Screw, 8-18 x 1/2 (12)
59	310976	Pan, Broiler
60	258171	Grid, Broiler Pan
61	308173	Rack, Oven
62	308172	Rack, Oven Offset

CONTROL PANEL PARTS

For Model: RS660B XK-3

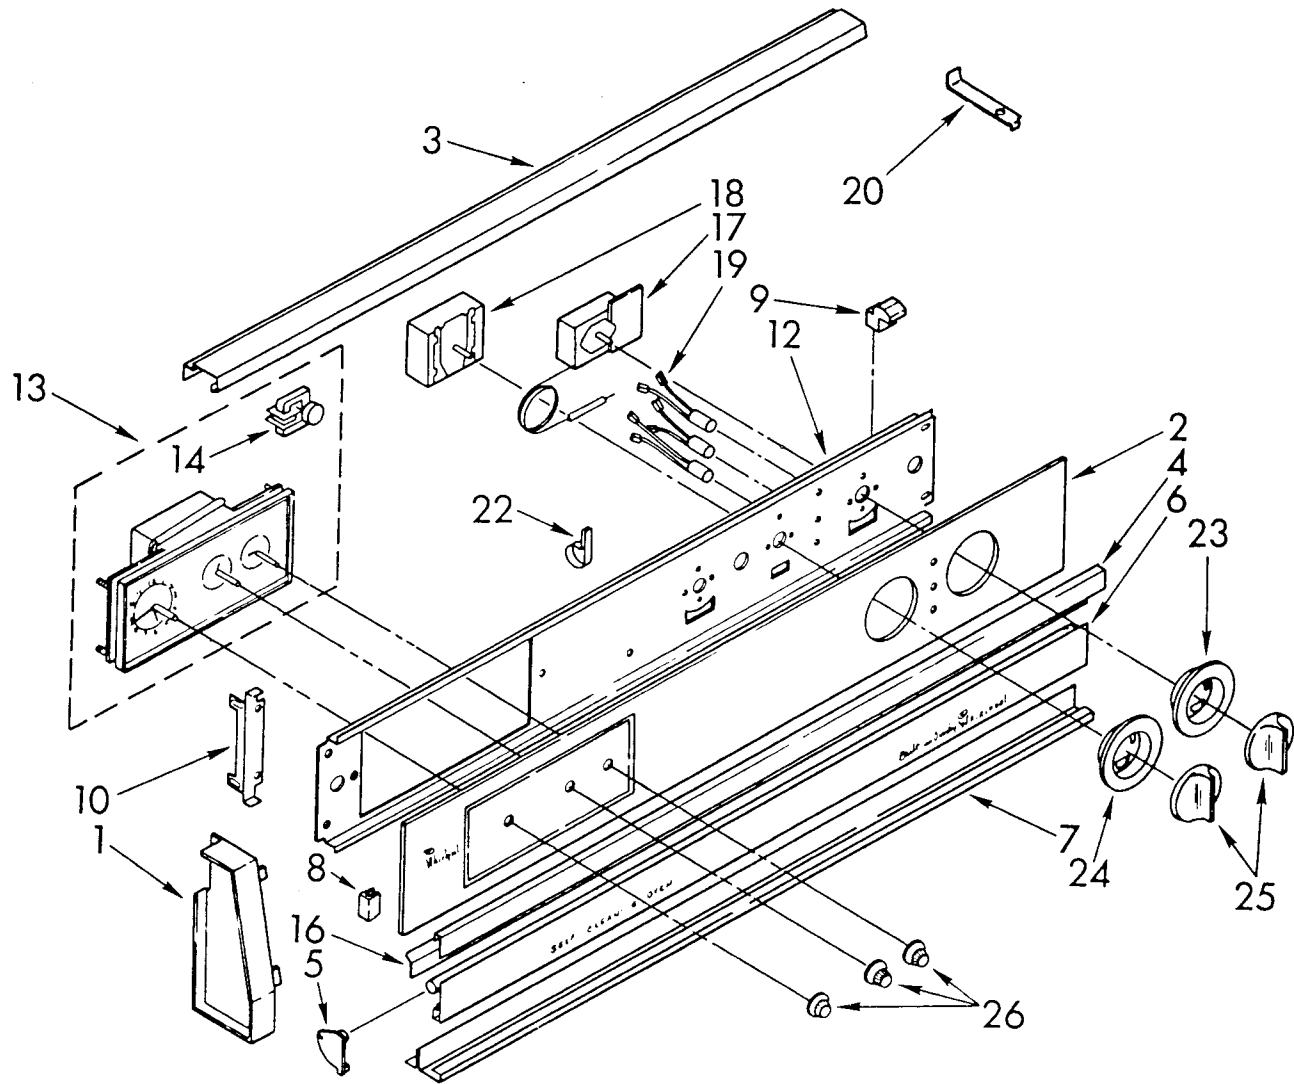


Note: The Screws And Nuts Required To Attach A Part Are Listed Immediately Following That Part.

1	310826	End Cap. L.H.
	310827	End Cap R.H.
	342043	Screw (2)
	308504	Screw (2)
2	313886	Control Panel, Glass
3	310819	Rail, Top
4	311189	Trim, Center
5	310833	End Trim, Vent Door R.H.
	310832	End Trim, Vent Door L.H.
6	312447	Door, Vent
7	311190	Trim, Bottom
	342043	Screw (6)
8	310842	Channel, Rubber (2)
9	310823	Retainer, Glass (4)
10	310720	Bracket, Control Panel (2)
	98520	Screw
12	313314	Bracket, Control
	246132	Screw, 8A x 3/8 (2)
13	312803	Timer, Automatic
14	309822	Motor, Timer
16	313316	Seal, Backguard
17	313856	Thermostat, Oven
	487384	Screw, 6-32 x 1/4 (2)
18	310006	Selector Switch
	155023	Screw, 8-32 x 1/4 (2)
19	311802	Light Indicator Oven, Lock & Clean (3)
20	312752	Support, Top Rail
22	308605	Strain Relief
	246132	Screw, 8A x 3/8
	166681	Screw, 10-32 x 5/16
23	311066	Escutcheon, Thermostat
24	311068	Escutcheon, Selector Switch
	254225	Screw, 8BT x 1/4 (2)
25	310834	Knob, Control (2)
26	330206	Knob, Timer (3)
	313311	Spring

DOOR PARTS

For Model: RS660BXK-3

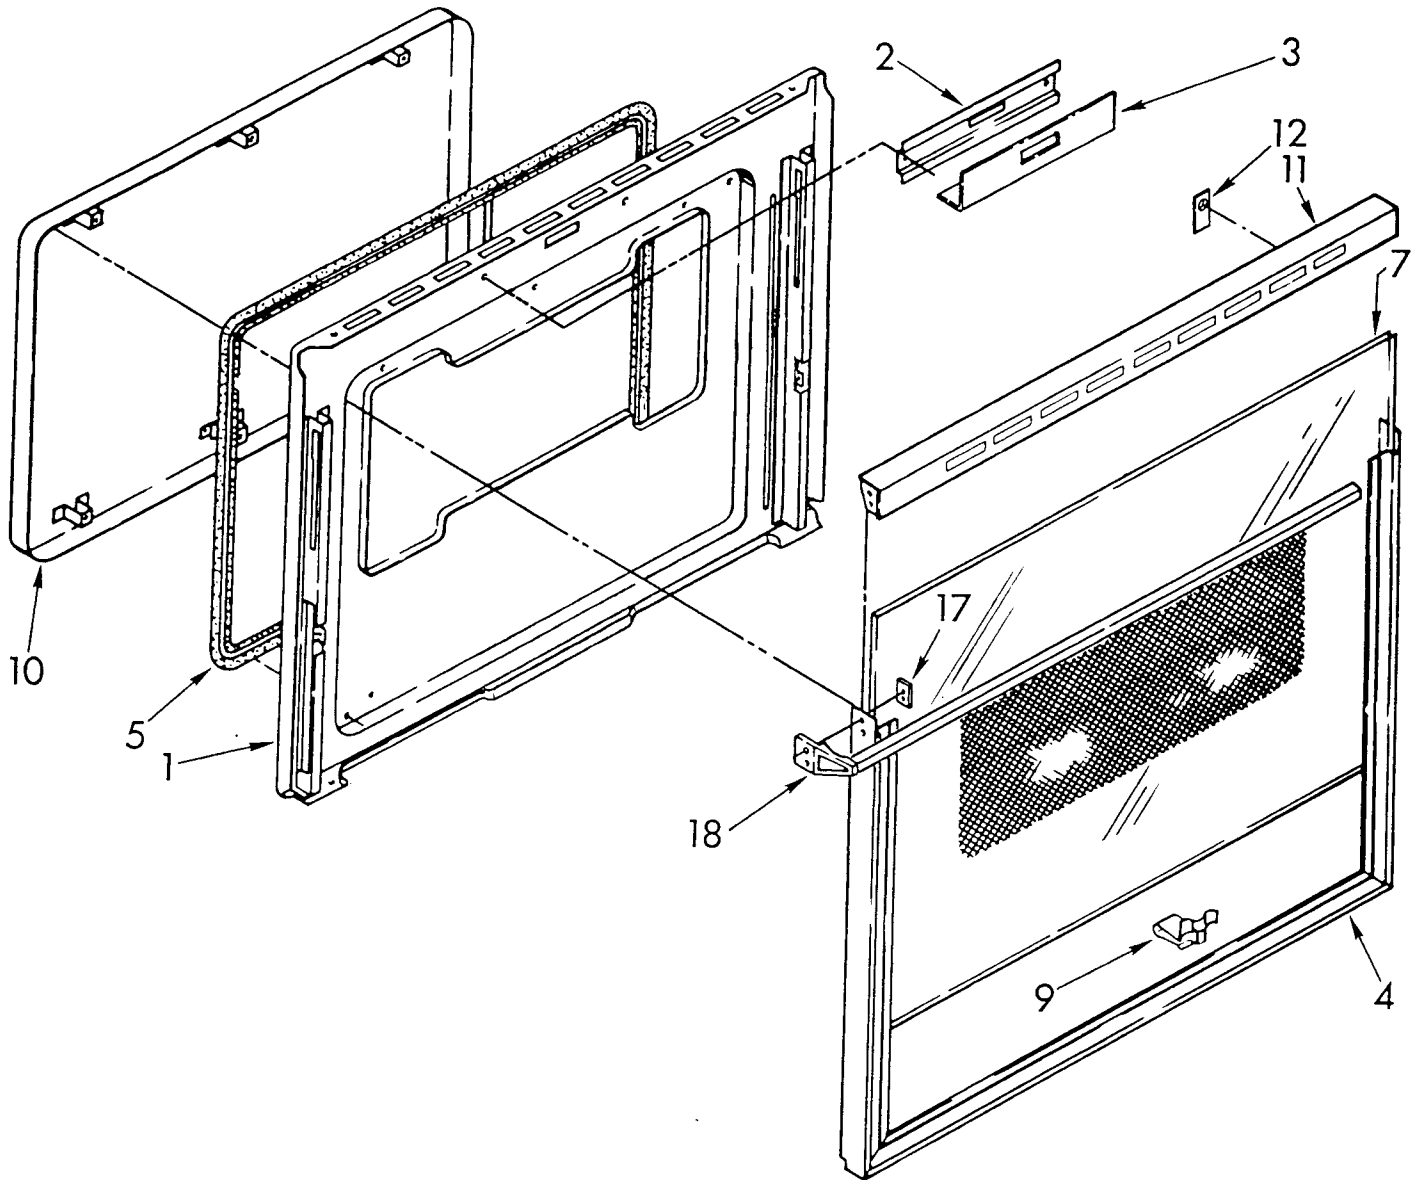


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Note: The Screws And Nuts Required To Attach A Part Are Listed Immediately Following That Part.

1	329694	Liner, Door
	313638	Screw, 8-18 x 1/2 (6)
	90296	Clip (2)
	311056	Screw (2)
2	308033	Channel Latch
3	310056	Shield, Insulation
	311054	Screw (2)
4	310427	Frame, Door
5	311904	Seal, Oven Door
7	310655	Glass, Outer
9	310706	Glass, Clip (10)
10	328546	Panel, Inner
11	310784	Top, Pano Door
	307748	Screw, 10A x 1/2 (2)
12	310705	Hold-Down, Glass (2)
17	311506	Clip
18	312721	Handle, Door
	308541	Screw (4)

COOKTOP PARTS

For Model: RS660BXK-3

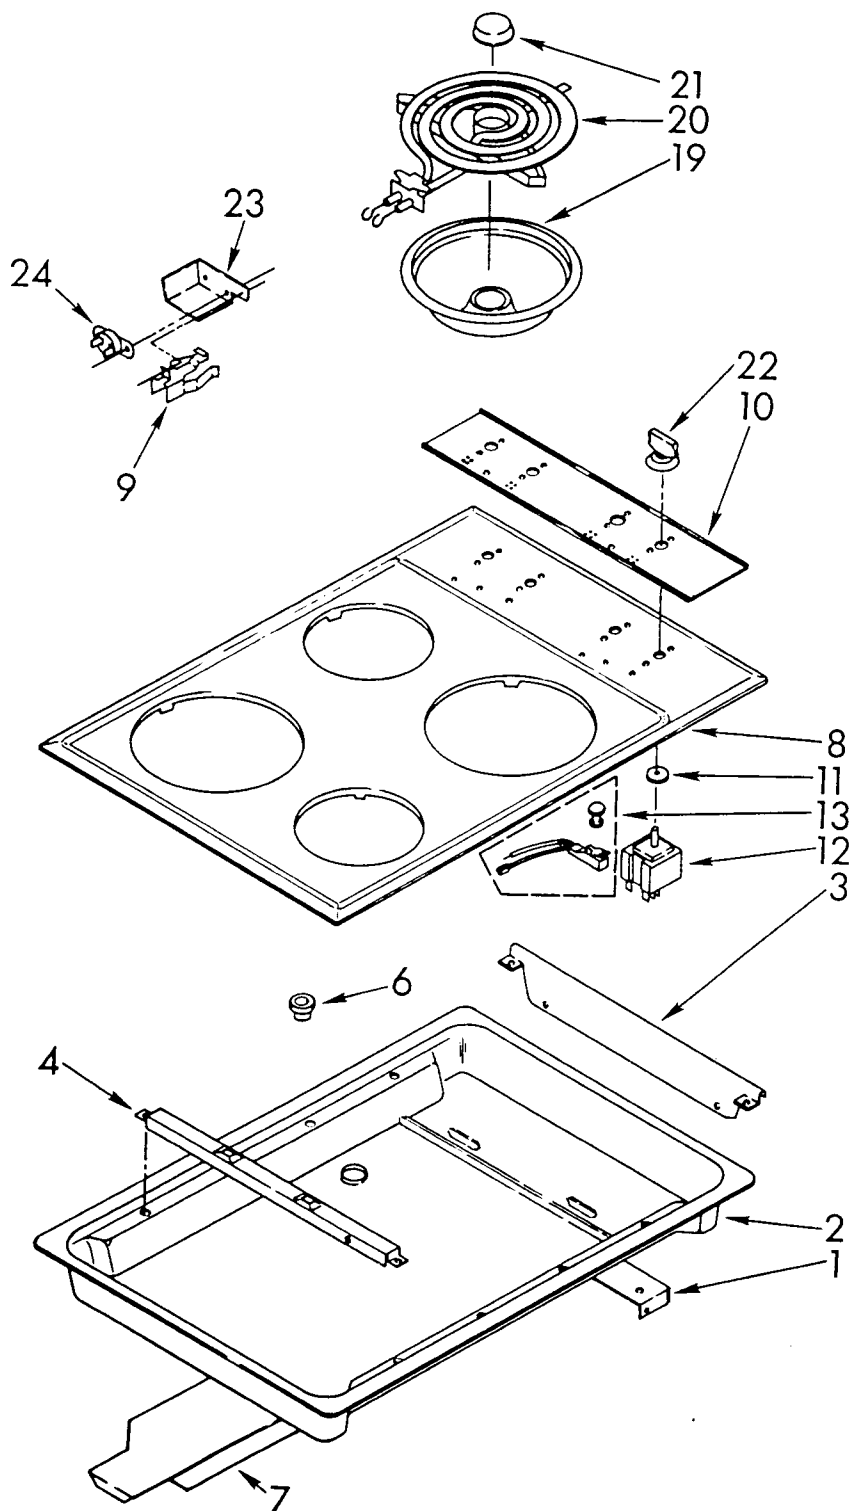



FOR ORDERING INFORMATION REFER TO PARTS

Note: The Screws And Nuts Required To Attach A Part Are Listed Immediately Following That Part.

1	310718	Support, Burner Box (2)
	313638	Screw, 8-18 x 1/2 (6)
2	311019	Burner Box
3	310716	Shield, Switch
	313638	Screw, 8-18 x 1/2 (2)
4	310717	Support, Cooktop
	313638	Screw, 8-18 x 1/2 (4)
6	258109	Bushing
7	3147565	Cover, Top Rear
	313638	Screw, 8-18 x 1/2 (3)
8	307492	Cooktop, Brushed Chrome
	166681	Screw, 10-32 x 5/16 (2)
	312318	Screw, 10-32 x 1/2 (5)
9	3147829	Clip, Receptacle (4)
	311932	Screw, 6-32 x 1/4 (4)
10	313132	Panel, Control
11	309839	Seal, Switch
12		Switch, Infinite
	311839	Use W/6" Surface Unit (2)
	311838	Use W/8" Surface Unit (2)
	311865	Screw, 8-32 (8)
13	313461	Indicator Light (2) (Includes Light Lens No. 313602)
19		Reflector Pan
	308539	6" (2)
	308540	8" (2)
20	660528	Unit, Surface 6"
		309191 (Alt.)
		313968 (Alt.)
	660530	Unit, Surface 8"
		309185 (Alt.)
		313966 (Alt.) (Includes Illus. 21)
21	309195	Medallion, Surface Unit
22	330190	Knob, Control (4)
23	3147830	Bracket
24	3147833	Thermostat
	313808	Screw, 6-32 (3)

WIRING HARNESS PARTS

For Model: RS660B XK-3

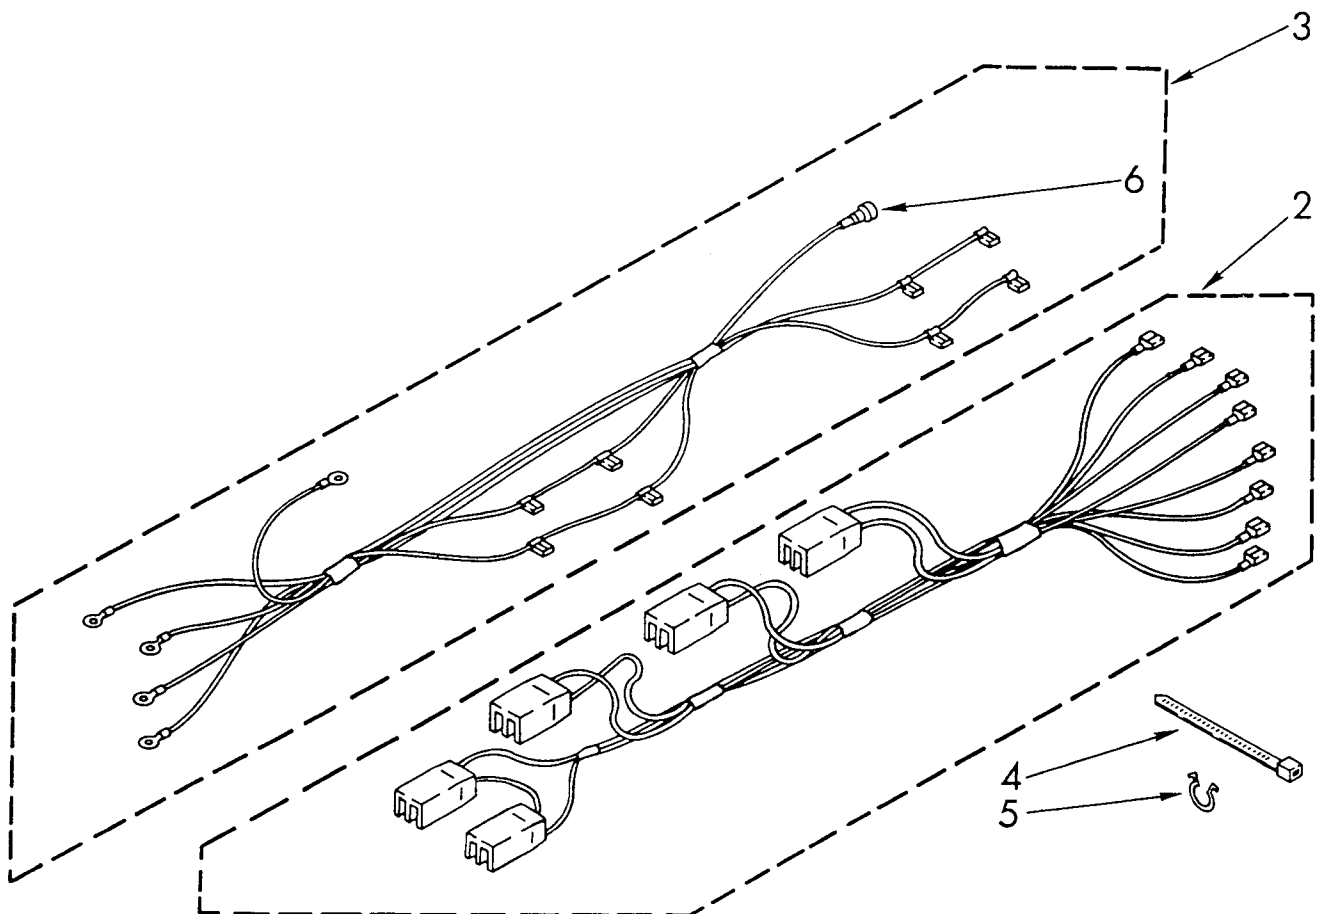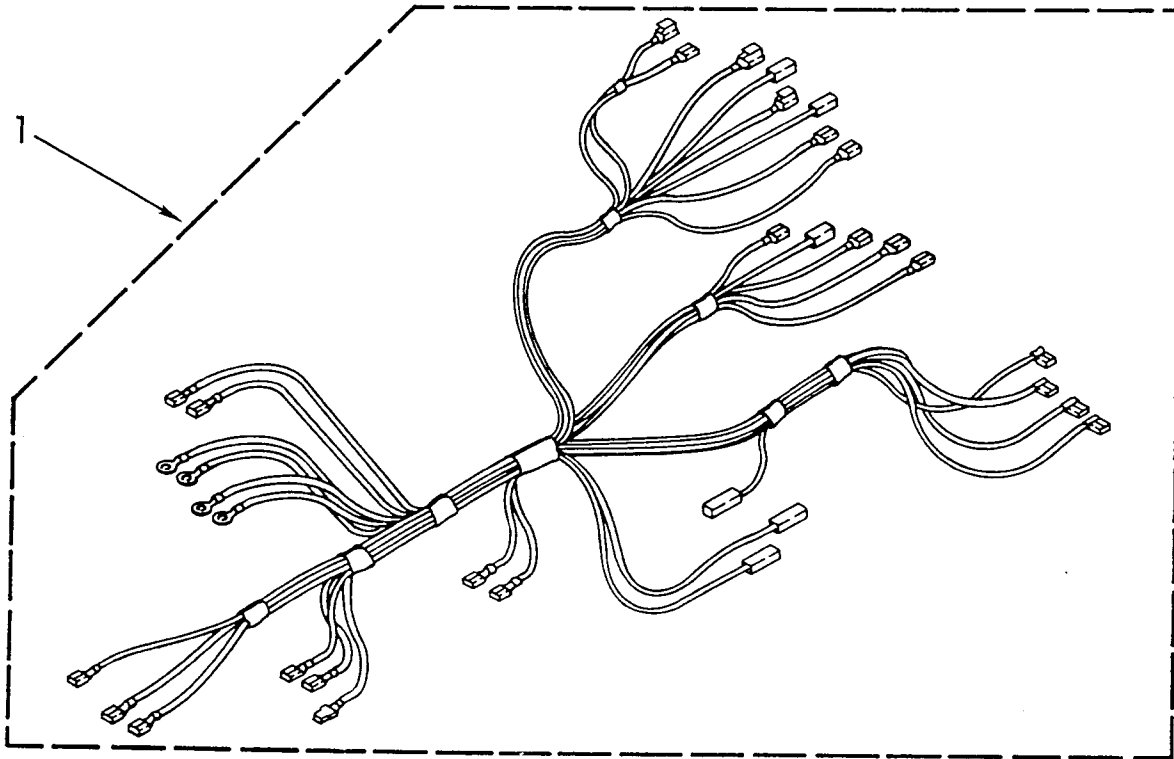

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	312188	Harness, Wire (Main)
2	3147828	Harness, Wire (Surface Unit)
3	313464	Harness, Wire (Infinite Switch)
4	309330	Tie, Cable
5	313438	Clip, Harness (2)
6	717253	Block, Disconnect

OPTIONAL PARTS NOT INCLUDED

SPLICING WIRES--25FT. LENGTH

242828	Wire, Black 12 Ga. 150~C
242820	Wire, Black 14 Ga. 150~C
242821	Wire, Blue 14 Ga. 150~C
242822	Wire, Brown 14 Ga. 150~C
242830	Wire, Brown 14 Ga. 200~C
242823	Wire, Green 14 Ga. 150~C
242824	Wire, Orange 14 Ga. 150~C
242829	Wire, Red 12 Ga. 150~C
242825	Wire, Red 14 Ga. 150~C
242831	Wire, Red 14 Ga. 200~C
242826	Wire, White 14 Ga. 150~C
242827	Wire, Yellow 14 Ga. 150~C
242832	Wire, Yellow 14 Ga. 200~C

REFINISHING MATERIAL

261810	Touch-Up Self-Clean (1/2 Pt.)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")
241430	Foil, Aluminum Oven (18" x 25")

ACCESSORY PARTS

261825	Console
261881	Rotisserie Kit

LITERATURE PARTS

LIT313872	Tech Sheet
LIT311433	Instructions, Installation
LIT313358	Book, Cooking Guide
LIT884225	List, Repair Parts