


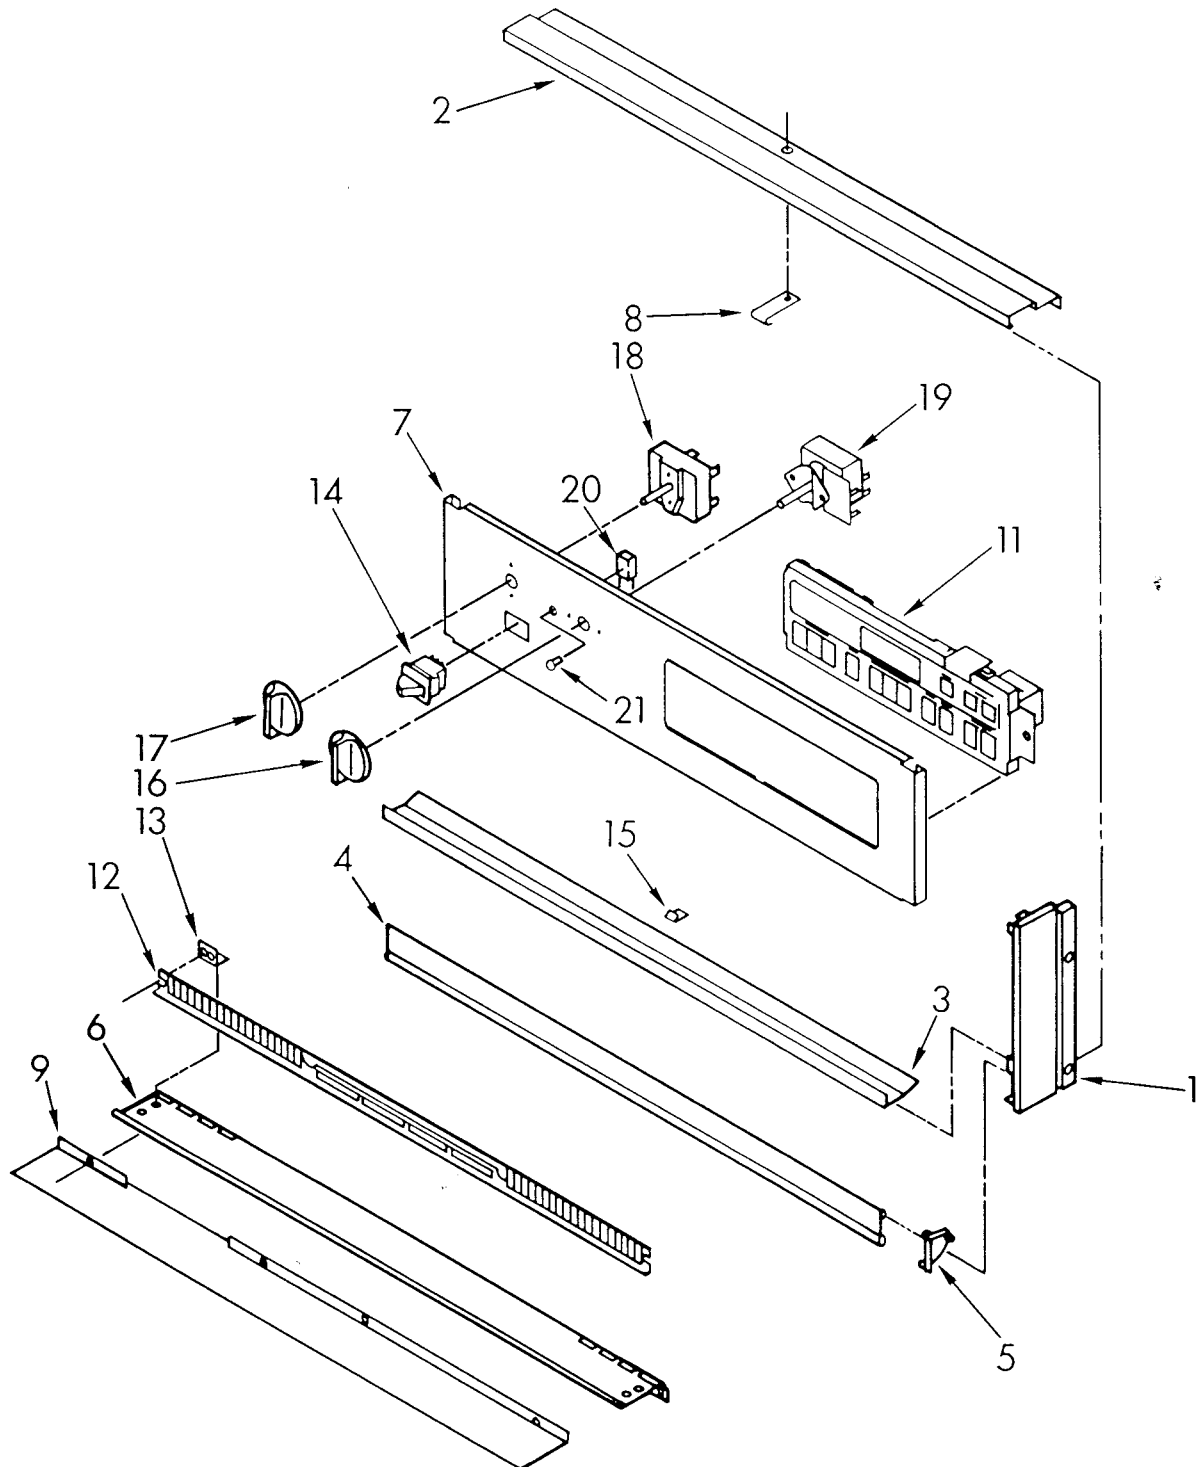

CONTROL PANEL PARTS

For Models: RB170PXYB5, RB170PXYQ5
(BLACK) (DESIGNER WHITE)

24" BUILT-IN ELECTRIC
DOUBLE OVEN
SELF CLEAN UPPER /
STANDARD CLEAN LOWER



NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1		End Cap, Left
	3183630	Black Model
	3185762	White Model End Cap, Right
	3183631	Black Model
	3185761	White Model
2	3184642	Trim, Top
	3185383	Screw (2)
3		Trim, Center
	3183574	Black Model
	3183576	White Model
4		Vent Door
	3183502	Black Model
	3183504	White Model
5		End Trim, Vent Door Left Hand
	3148697	Black Model
	3148471	White model Right hand
	3148698	Black Model
	3148472	White Model
6		Trim, Bottom
	3184410	Black Model
	3184411	White Model
	342043	Screw (2)
7		Control Panel
	3184646	Black Model
	3184647	White Model
8	3183492	Stiffener, Bracket
	311773	Screw (5)
9		Trim, Vent Upper
	3184591	Black Model
	3184590	White Model
11		Electronic Timer
	3169256	Black Model
	3169257	White Model
	3148443	Screw (4)
12	3179915	Insert, Vent
13	3181279	Bracket, Vent Insert
	3148443	Screw (2)
14		Switch, Rocker
	3182717	Black Model
	3182718	White Model
15	3183493	Stiffener Bracket
	4159465	Screw
16		Knob, Thermostat
	3183106	Black Model
	3183107	White Model
17		Knob Selector
	3183109	Black Model
	3183110	White Model
18	3183583	Switch, Selector
	155023	Screw (2)
19	3183572	Thermostat
	3178002	Screw (2)
20	314031	Light, Indicator
21	313101	Lens, Amber
	309133	Screw (4)


FOLLOWING PARTS NOT ILLUSTRATED

LITERATURE PARTS

LIT3184643	Tech Sheet
LIT3183636	Installation Instructions
LIT3182871	Use & Care Guide
LIT3181454	Brochure

UPPER OVEN PARTS

For Models: RB170PXYB5, RB170PXYQ5
(BLACK) (DESIGNER WHITE)

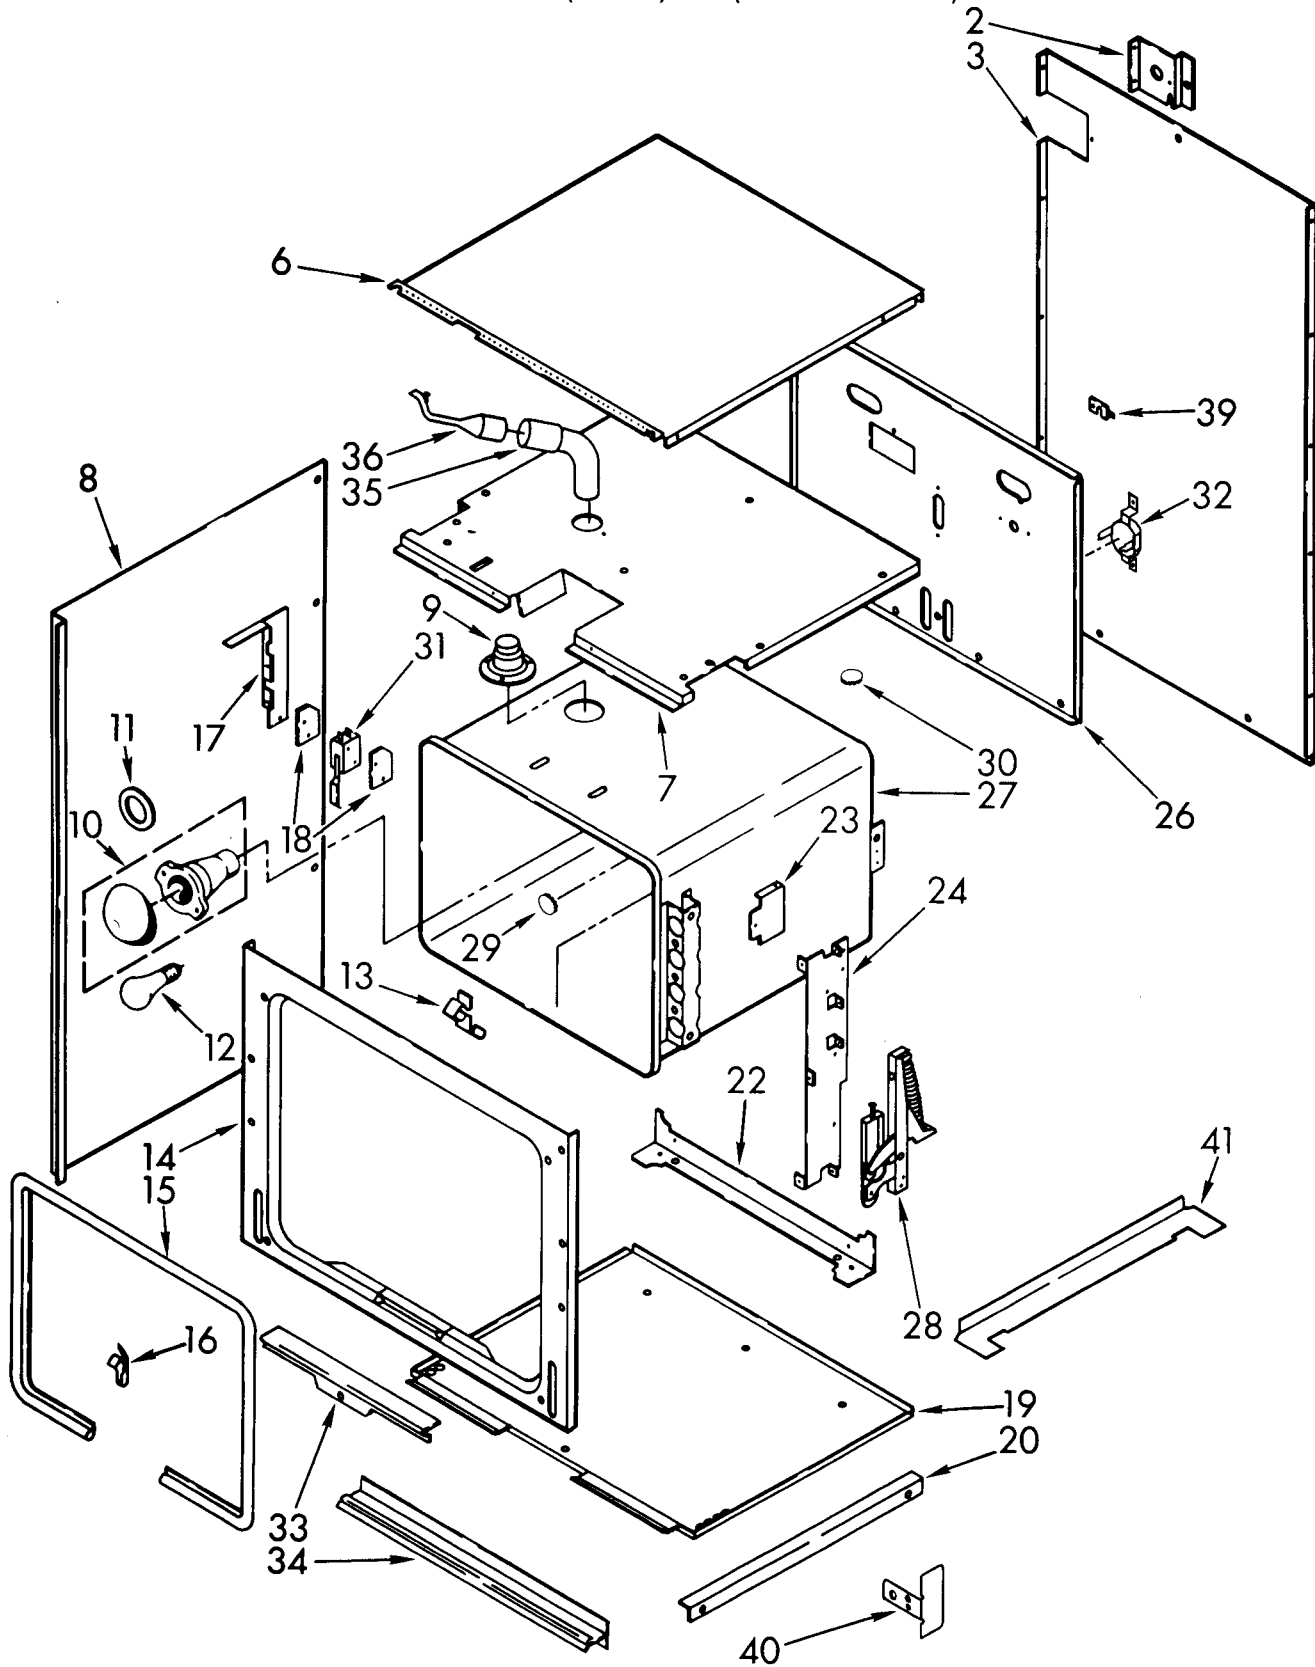

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

2	3177545	Bracket, Conduit
	3148443	Screw (2)
3	3177624	Cabinet, Back
	3148443	Screw (18)
6	3178141	Cabinet, Top
	3148443	Screw (5)
7	3183747	Top, Module
	3148443	Screw (8)
8	3177440	Side, Cabinet (R.H. & L.H.)
	3148443	Screw (10)
9	3181699	Tube, Vent
10	3150505	Oven Light Assy.
11	3184533	Gasket, Light
12	311255	Bulb, Oven Light
13	313382	Clip, Thermostat Bulb
14		Frame, Front
	3185864	Black Model
	3185863	White Model
15	3179814	Seal, Door
16	3179848	Clip, Oven Seal
17	3177681	Bracket, Switch
18	3177923	Insulator, Switch
19	3177622	Bottom, Module
20	3179220	Rail, Support (2)
	3148443	Screw (4)
22	3177434	Support, Oven
	3148443	Screw (2)
23	3178612	Shield, Radiation
	3148443	Screw (2)
24	3177433	Bracket, Hinge
	3179795	Screw (6)
	3148443	Screw (2)
26	3177559	Back, Module
	3148443	Screw (8)
27	3185561	Liner, Oven
28	3178298	Hinge, Door (2)
	3179795	Screw (4)
29	3185085	Button, Plug
30	3182814	Button, Plug
	3148443	Screw (18)
31	4173553	Switch, Door
	4159117	Nut (2)
	313489	Screw (2)
32	3149653	Thermostat
33	3179587	Retainer, Seal
	4168863	Screw
34		Vent, Middle Trim
	3182118	Black Model
	3180022	Screw
	3182120	White Model
	3179847	Screw
35	3179922	Tube, Vent (Upper Female)
36	3184652	Tube, Vent (Upper Male)
39	4168203	Cover, Cap Tube
	4159445	Screw

40		Insert, Middle Vent Trim
	3182286	Black Model
	3181733	White Model
	4173601	Screw (2)
41	3182584	Bracket, Mounting Control Panel
	3177991	Screw (2)


FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

3185550	Insulation, Wrap
3177870	Insulation, Back

LOWER OVEN PARTS

For Models: RB170PXYB5, RB170PXYQ5
(BLACK) (DESIGNER WHITE)

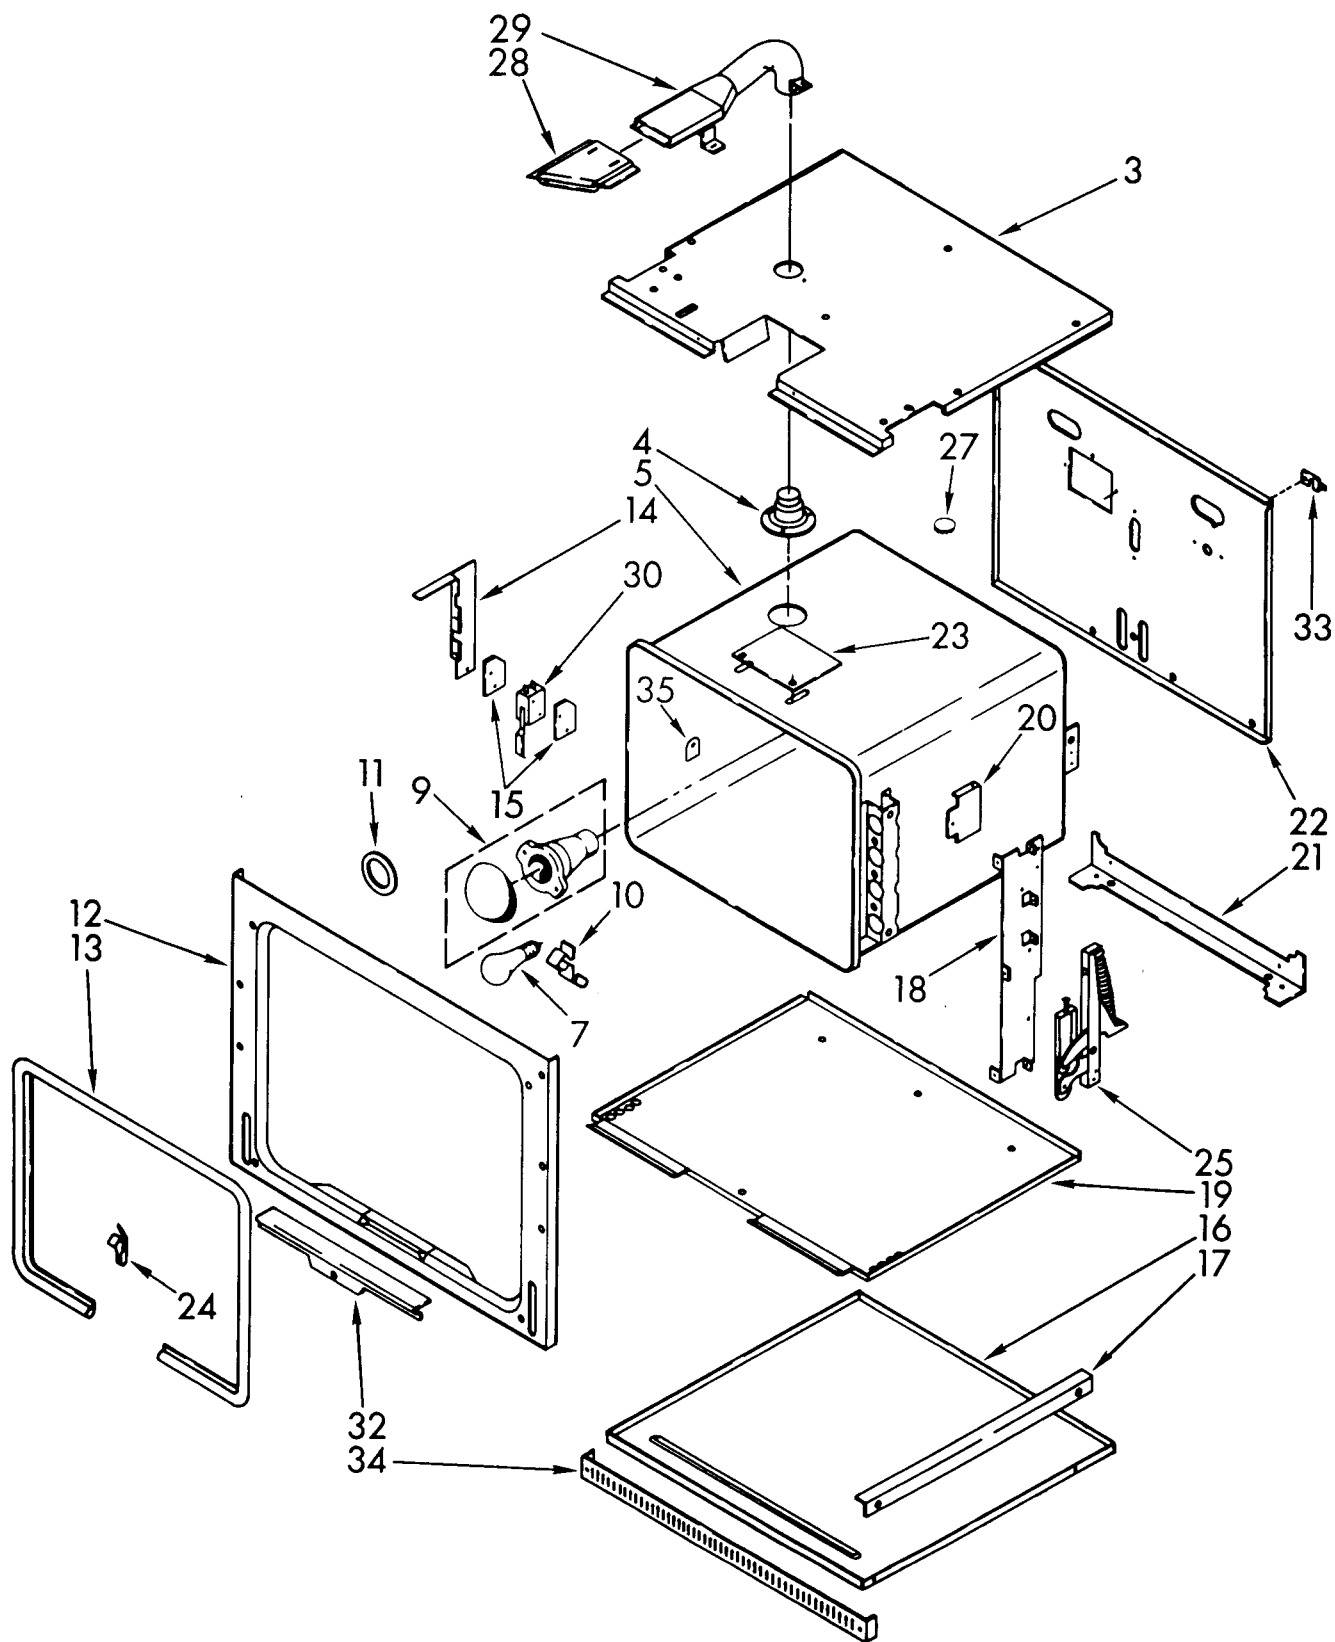


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

3	3183747	Top, Module
	3148443	Screw (8)
4	3181700	Tube, Vent
5	3185561	Liner, Oven
7	311255	Bulb, Oven Light
9	3150505	Oven Light Assy.
10	313382	Clip, Bulb (2)
11	3184533	Gasket, Light
12		Frame, Door
	3177704	Black Model
	3177702	White Model
13	3179814	Seal, Door
14	3177681	Bracket, Switch
	3177991	Screw (2)
15	3177923	Insulator, Switch
16	3177552	Bottom, Oven
17	3179220	Rail, Support (2)
	3148443	Screw (4)
18	3177433	Bracket, Hinge (2)
	3179795	Screw (6)
	3148443	Screw (2)
19	3177622	Bottom, Module
20	3178612	Shield, Radiation
	3148443	Screw (2)
21	3177434	Support, Oven
	3148443	Screw (2)
22	3177559	Back, Module
	3148443	Screw (8)
23	3180126	Cover, Latch Mtg.
24	3179848	Clip, Seal (3)
25	3178298	Hinge, Door (2)
	3179795	Screw (4)
27	3182814	Button, Plug
28		Tube, Vent (Female)
	3181964	White Model
	3187388	Black Model
	3148443	Screw (3)
29	3179945	Tube, Vent (Male)
30	4173553	Switch, Door
	4159117	Nut (2)
	313489	Screw (2)
32	3179587	Retainer, Seal
	4168863	Screw
	3179776	Screw (8)
33	4168203	Cover, Cap Tube
	4159445	Screw
34		Trim, Lower Vent
	3177784	Black Model
	3177786	White Model
35	3184208	Plate, Cover

UPPER OVEN DOOR PARTS

For Models: RB170PXYB5, RB170PXYQ5
(BLACK) (DESIGNER WHITE)

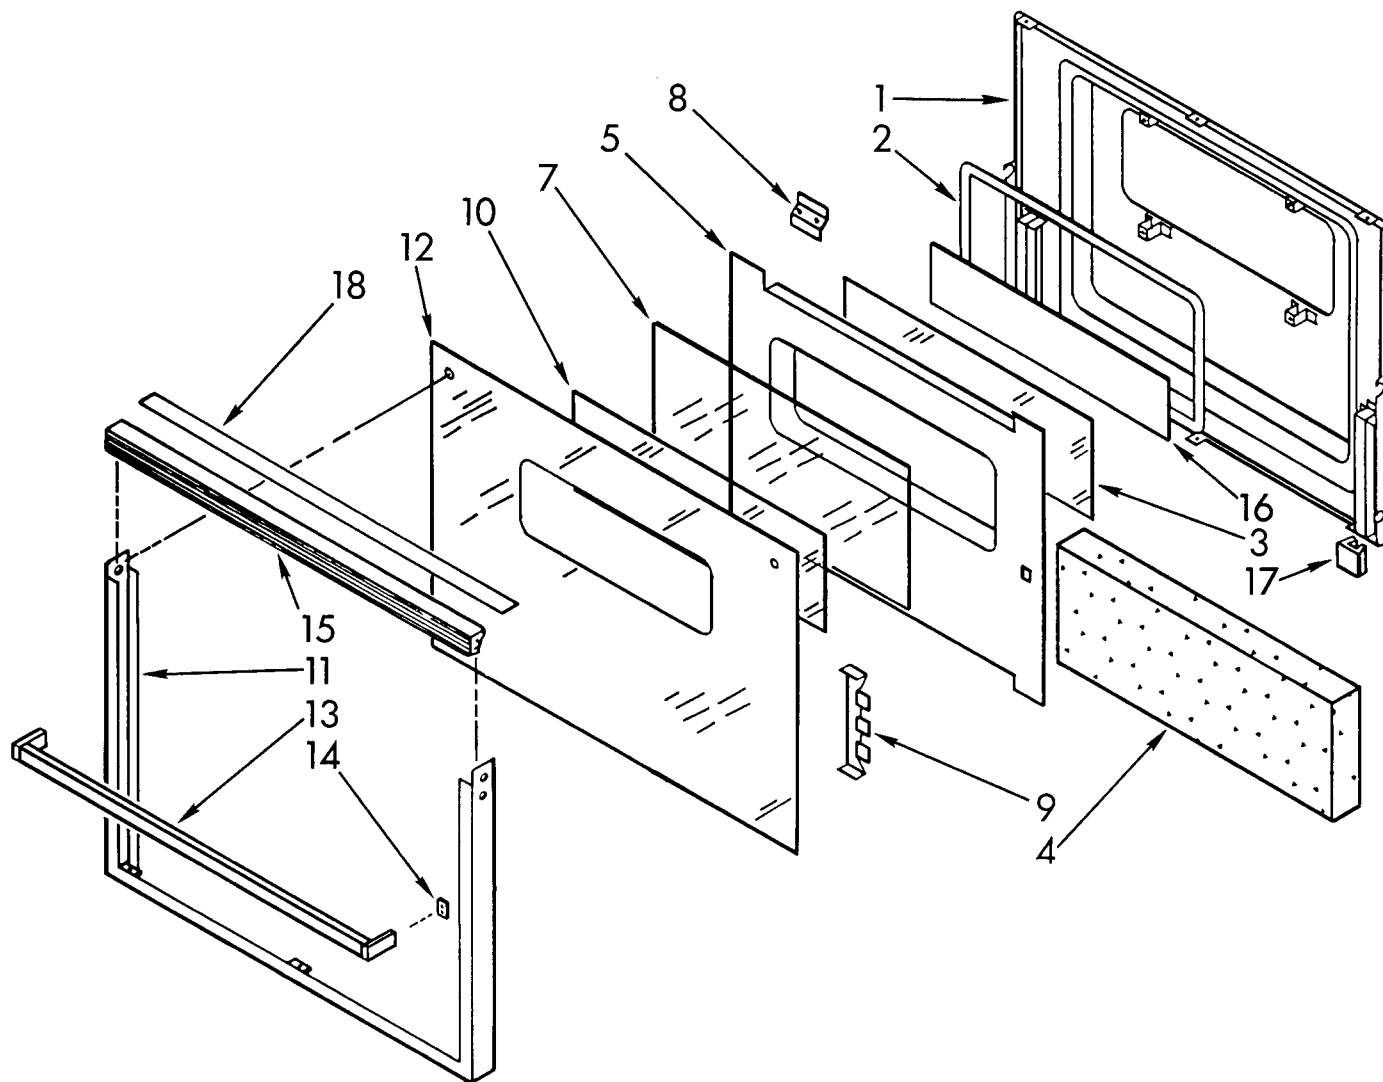


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3185499	Liner, Door
	3178001	Screw, Black (2)
2	3185462	Seal, Window
3	3185457	Glass, Clear
4	3185460	Insulation, Door
5	3185437	Insulation Retainer
	4173601	Screw
7	3185458	Glass, Reflective
8	3185438	Plate, Latch Strike
9	3185439	Retainer, Glass
	3148443	Screw
10	3185459	Glass, Clear
11	3180606	Frame, Door
12		Glass, Door
	3179497	Black Model
	3179499	White Model
13		Handle, Door
	3179482	Black Model
	3179484	White Model
	355515	Screw
14	3148282	Clip, Mounting
15		Trim, Door
	3185526	Black
	3185528	White
16	3185473	Foil, Adhesive
17	3181701	Bumper, Door Glass
18	3181365	Cap, Top (White Model)

LOWER OVEN DOOR PARTS

For Models: RB170PXYB5, RB170PXYQ5
(BLACK) (DESIGNER WHITE)

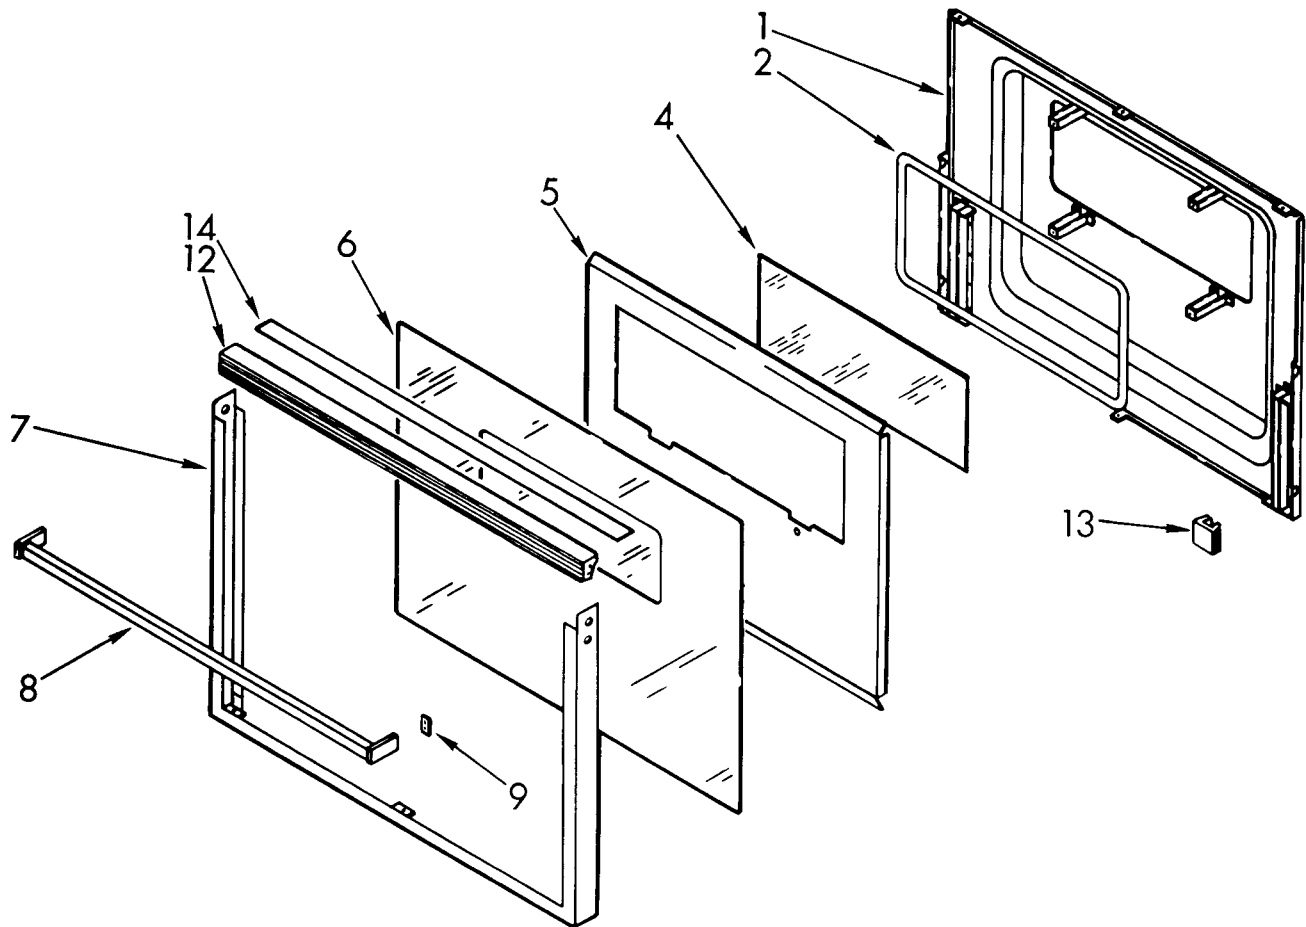


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3185500	Liner, Door
	3178001	Screw, Black (2)
	4168863	Screw (6)
2	3185462	Seal, Window
4	3185457	Glass, Clear
5	3185437	Retainer, Insulation
	3148443	Screw (4)
6		Glass, Door
	3179497	Black Model
	3179499	White Model
7	3180606	Frame, Door
8		Handle, Door
	3179482	Black Model
	3179484	White Model
	355515	Screw (2)
9	3148282	Clip, Mounting
12		Trim, Door
	3185526	Black Model
	3185528	White Model
13	3181701	Bumper, Door Glass
14	3181365	Cap, Top (White Model)

COMPONENT SHELF AND LATCH PARTS

For Models: RB170PXYB5, RB170PXYQ5
(BLACK) (DESIGNER WHITE)

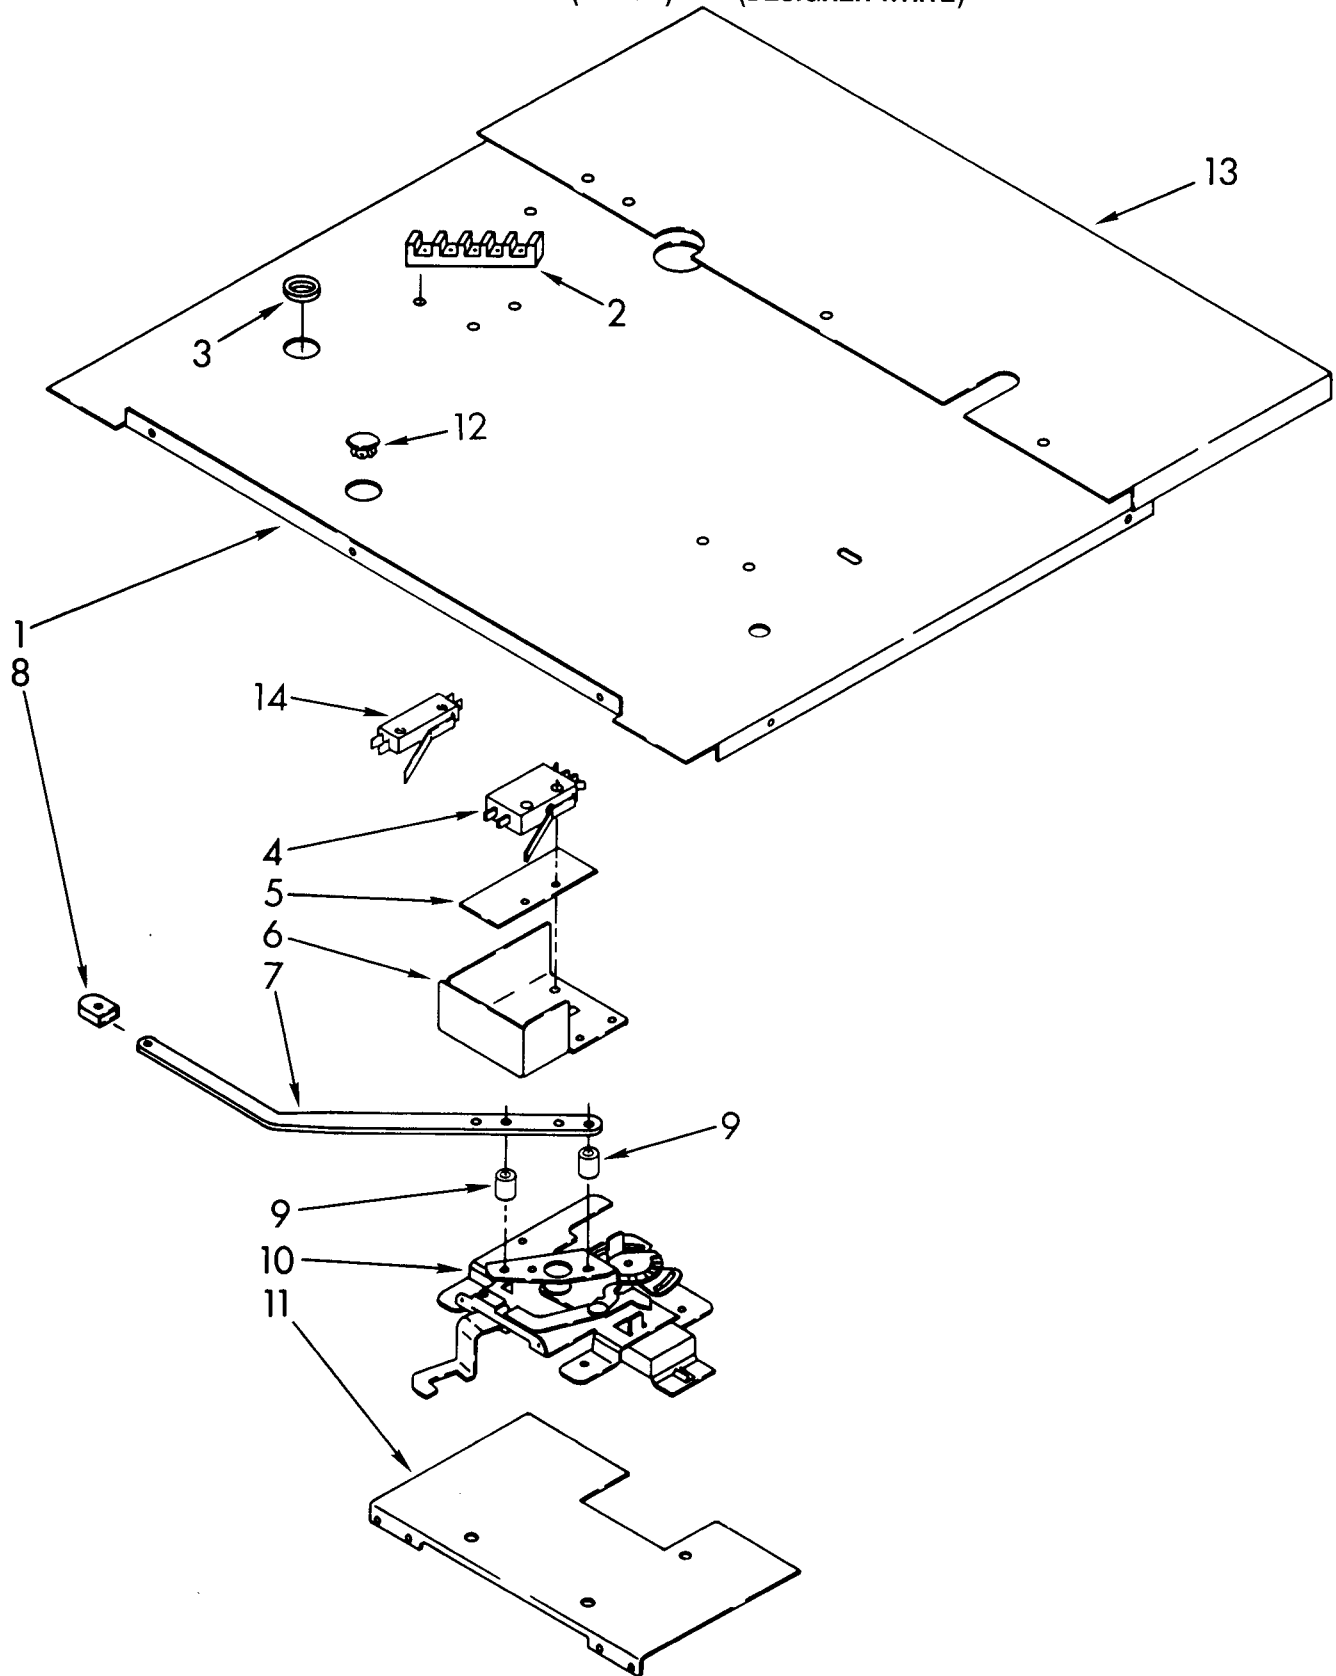


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3178092	Shelf, Component
2	258076	Block, Terminal
	308043	Screw
3	4159035	Bushing
4	3178671	Switch, Latch
5	3178185	Insulator, Switch
6	3177662	Guard, Latch
7	3177969	Handle, Latch
8	3184039	Knob, Latch Handle
	3183294	Screw
9	3184041	Spacer, Latch Handle
	3184042	Screw (2)
10	3178410	Latch Mechanism
11	3177496	Plate, Mounting
	3177991	Screw (3)
12	3179777	Button, Plug
13	3178133	Extension, Shelf
14	3178187	Switch, Latch
	3177988	Screw

UNIT PARTS

For Models: RB170PXYB5, RB170PXYQ5
(BLACK) (DESIGNER WHITE)

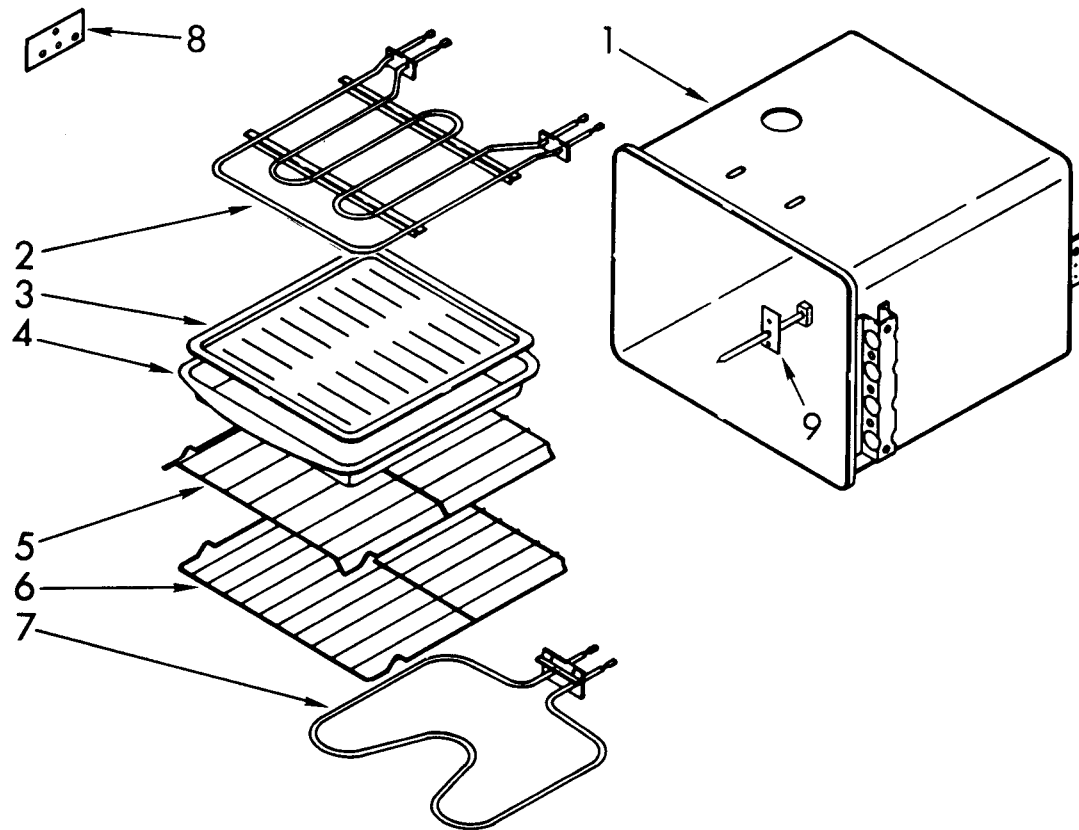


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

- | | | |
|---|---------|------------------|
| 1 | 3185561 | Liner, Oven |
| 2 | 660579 | Element, Broil |
| | 3179117 | Screw (4) |
| 3 | 3147563 | Grill, Broiler |
| 4 | 3147845 | Pan, Broiler |
| 5 | 3185309 | Rack, Offset |
| 6 | 3185310 | Rack, Oven |
| 7 | 661416 | Element, Bake |
| | 3179117 | Screw (2) |
| 8 | 3182950 | Bracket, Element |
| | 3179117 | Screw (4) |
| 9 | 3148440 | Sensor, Heat |
| | 3179117 | Screw (2) |

WIRING HARNESS PARTS

For Models: RB170PXYB5,
(BLACK)

RB170PXYQ5
(DESIGNER WHITE)

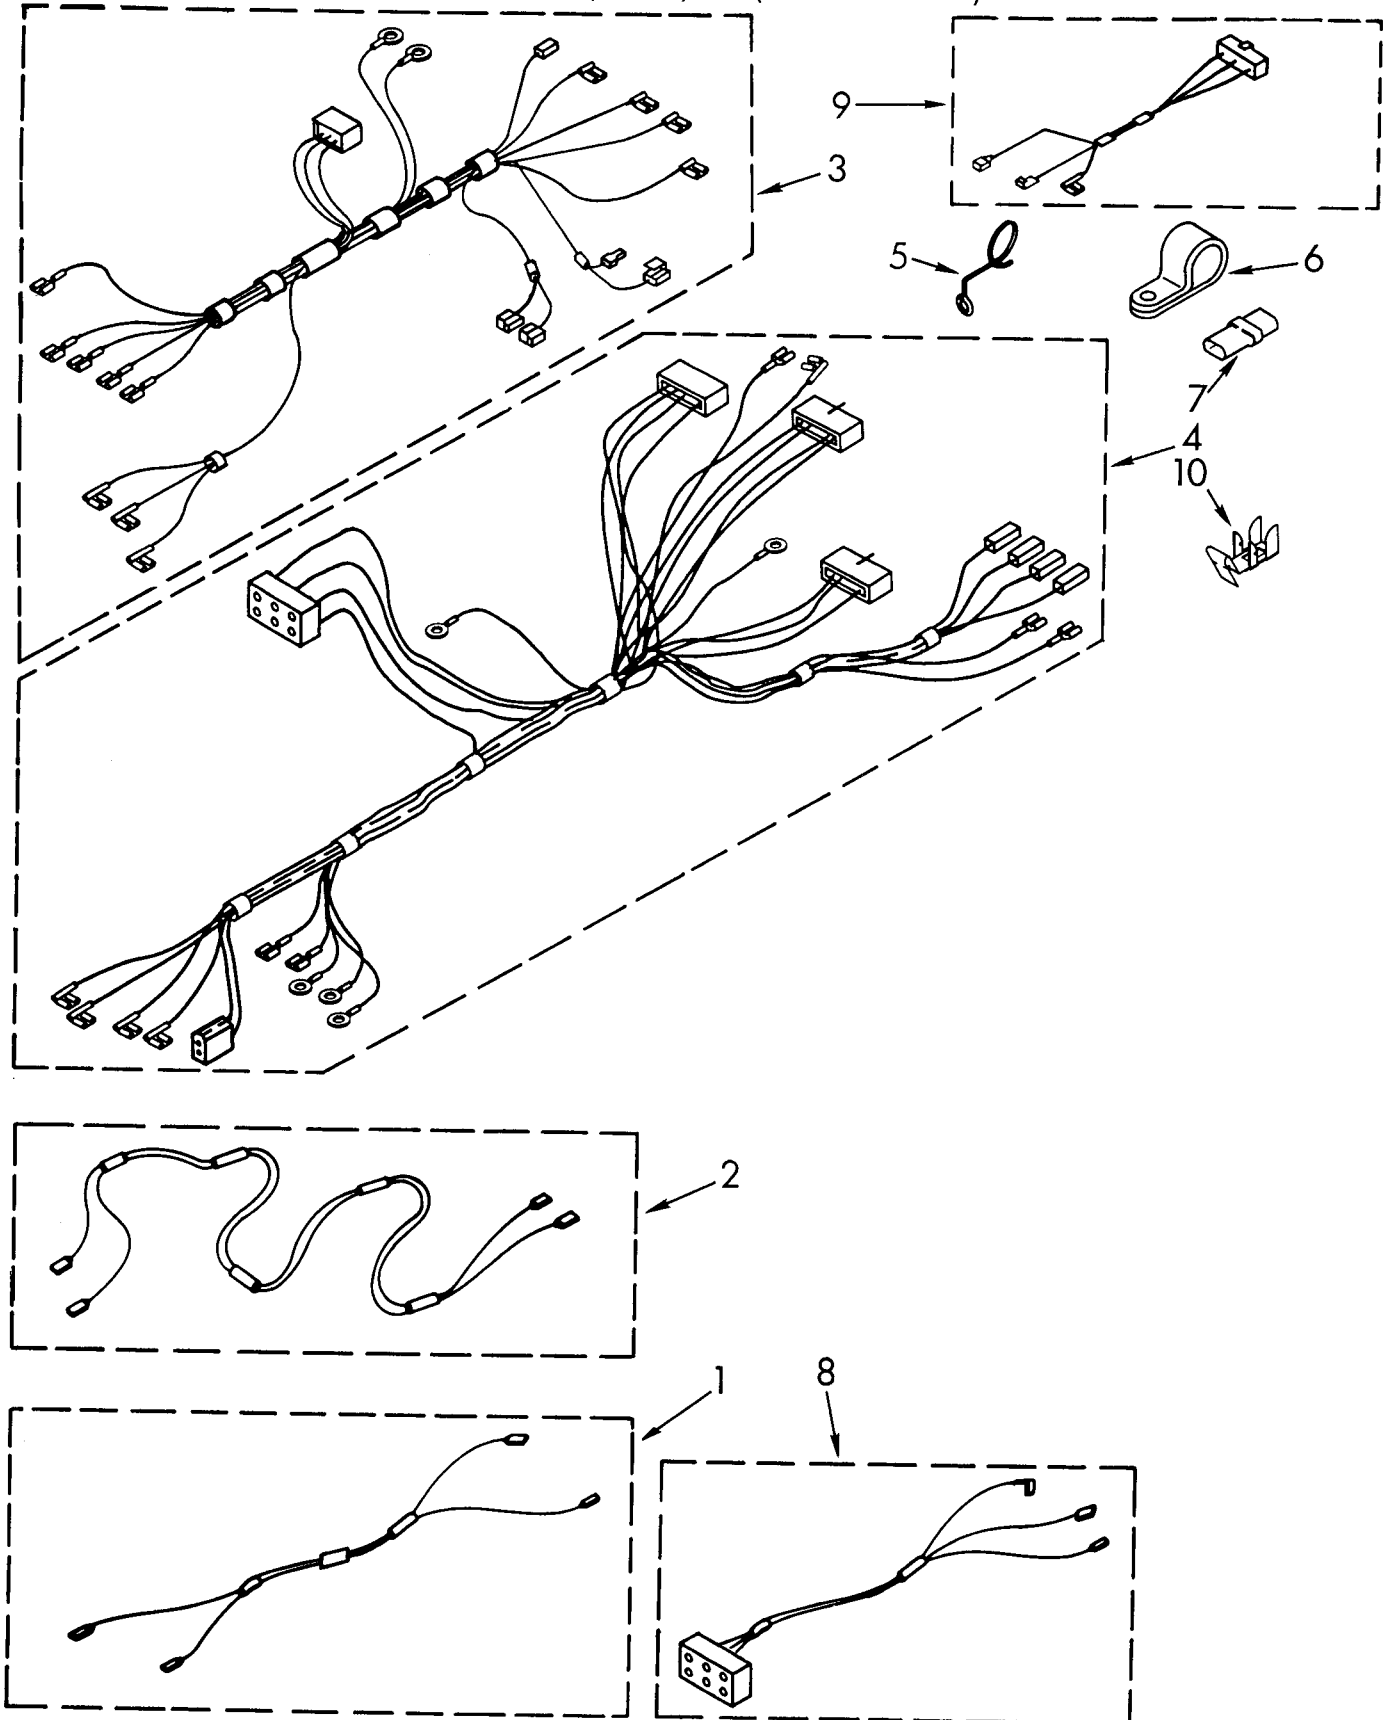

1	3184705	Harness Wire (Door Switch Upper)
2	3183656	Harness Wire (Door Switch Lower)
3	3184715	Harness Wire (Lower Oven)
4	3184706	Harness Wire (Upper Oven)
5	3179668	Standoff, Wire
	3148443	Screw (4)
	112432	Nut, Hex (3)
6		Clamp
	3184791	3/8 I.D.
	3184792	3/4 I.D.
	3148107	Screw
7	309551	Connector, Line Splice
8	3184691	Wiring Harness (Latch Assembly)
9	3184692	Harness Wire (Latch Assembly Lower)
10	357572	Clip